



SMC7908VoWBRA BARRICADE™ g ADSL Router

USER GUIDE



54Mbps Wireless Voip Router with built-in ADSL Modem

From SMC's line of award-winning connectivity solutions

SMC[®]

Networks

38 Tesla

Irvine, CA 92618

Phone: (949) 679-8000

September 2004

R.01 F 0.33.7

Information furnished is believed to be accurate and reliable. However, no responsibility is assumed by our company for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of our company. We reserve the right to change specifications at any time without notice.

Copyright © 2004 by
SMC Networks, Inc.
38 Tesla
Irvine, CA 92618
All rights reserved.

Trademarks:

SMC is a registered trademark; and Barricade is a trademark of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

LIMITED WARRANTY

Limited Warranty Statement: SMC Networks, Inc. (“SMC”) warrants its products to be free from defects in workmanship and materials, under normal use and service, for the applicable warranty term. All SMC products carry a standard 90-day limited warranty from the date of purchase from SMC or its Authorized Reseller. SMC may, at its own discretion, repair or replace any product not operating as warranted with a similar or functionally equivalent product, during the applicable warranty term. SMC will endeavor to repair or replace any product returned under warranty within 30 days of receipt of the product.

The standard limited warranty can be upgraded to a Limited Lifetime* warranty by registering new products within 30 days of purchase from SMC or its Authorized Reseller. Registration can be accomplished via the enclosed product registration card or online via the SMC web site. Failure to register will not affect the standard limited warranty. The Limited Lifetime warranty covers a product during the Life of that Product, which is defined as the period of time during which the product is an “Active” SMC product. A product is considered to be “Active” while it is listed on the current SMC price list. As new technologies emerge, older technologies become obsolete and SMC will, at its discretion, replace an older product in its product line with one that incorporates these newer technologies. At that point, the obsolete product is discontinued and is no longer an “Active” SMC product. A list of discontinued products with their respective dates of discontinuance can be found at:

http://www.smc.com/index.cfm?action=customer_service_warranty.

All products that are replaced become the property of SMC. Replacement products may be either new or reconditioned. Any replaced or repaired product carries either a 30-day limited warranty or the remainder of the initial warranty, whichever is longer. SMC is not responsible for any custom software or firmware, configuration information, or memory data of Customer contained in, stored on, or integrated with any products returned to SMC pursuant to any warranty. Products returned to SMC should have any customer-installed accessory or add-on components, such as expansion modules, removed prior to returning the product for replacement. SMC is not responsible for these items if they are returned with the product.

Customers must contact SMC for a Return Material Authorization number prior to returning any product to SMC. Proof of purchase may be required. Any product returned to SMC without a valid Return Material Authorization (RMA) number clearly marked on the outside of the package will be returned to customer at customer's expense. For warranty claims within North America, please call our toll-free customer support number at (800) 762-4968. Customers are responsible for all shipping charges from their facility to SMC. SMC is responsible for return shipping charges from SMC to customer.

LIMITED WARRANTY

WARRANTIES EXCLUSIVE: IF AN SMC PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY SHALL BE REPAIR OR REPLACEMENT OF THE PRODUCT IN QUESTION, AT SMC'S OPTION. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. SMC NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS. SMC SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OR OTHER HAZARD.

LIMITATION OF LIABILITY: IN NO EVENT, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), SHALL SMC BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE, LOSS OF BUSINESS, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCTS, EVEN IF SMC OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR THE LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR CONSUMER PRODUCTS, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE. NOTHING IN THIS WARRANTY SHALL BE TAKEN TO AFFECT YOUR STATUTORY RIGHTS.

* SMC will provide warranty service for one year following discontinuance from the active SMC price list. Under the limited lifetime warranty, internal and external power supplies, fans, and cables are covered by a standard one-year warranty from date of purchase.

SMC Networks, Inc.
38 Tesla
Irvine, CA 92618

COMPLIANCES

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

FCC Caution: To assure continued compliance, (example - use only shielded interface cables when connecting to computer or peripheral devices) any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT STATEMENT FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm (8 in) between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC - Part 68

This equipment complies with Part 68 of the FCC rules. This equipment comes with a label attached to it that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

This equipment uses the following USOC jacks: RJ-11C.

COMPLIANCES

The REN is used to determine the quantity of devices that may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact our company at the numbers shown on back of this manual for repair and warranty information. If the trouble is causing harm to the telephone network, the telephone company may request you to remove the equipment from the network until the problem is resolved.

No repairs may be done by the customer.

This equipment cannot be used on telephone company-provided coin service. Connection to Party Line Service is subject to state tariffs.

When programming and/or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in off-peak hours such as early morning or late evenings.

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone facsimile machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission the date and time it is sent and an identification of the business, other entity, or individual sending the message and the telephone number of the sending machine or such business, other entity, or individual.

In order to program this information into your facsimile, refer to your communications software user manual.

EC Conformance Declaration



SMC contact for these products in Europe is:

SMC Networks Europe,
Edificio Conata II,
Calle Frutuós Gelabert 6-8, 2o, 4a,
08970 - Sant Joan Despí,
Barcelona, Spain.

Marking by the above symbol indicates compliance with the Essential Requirements of the R&TTE Directive of the European Union (1999/5/EC). This equipment meets the following conformance standards:

EN 300 328-1 December 2001 V1.3.1

EN 300 328-2 December 2001 V1.2.1

EN 301 489-1 September 2001 V1.4.1

EN 301 489-17 September 2000 V1.2.1

EN 60950 January 2000

Safety Compliance

Wichtige Sicherheitshinweise (Germany)

1. Bitte lesen Sie diese Hinweise sorgfältig durch.
2. Heben Sie diese Anleitung für den späteren Gebrauch auf.
3. Vor jedem Reinigen ist das Gerät vom Stromnetz zu trennen. Verwenden Sie keine Flüssigoder Aerosolreiniger. Am besten eignet sich ein angefeuchtetes Tuch zur Reinigung.
4. Die Netzanschlusßsteckdose soll nahe dem Gerät angebracht und leicht zugänglich sein.
5. Das Gerät ist vor Feuchtigkeit zu schützen.
6. Bei der Aufstellung des Gerätes ist auf sicheren Stand zu achten. Ein Kippen oder Fallen könnte Beschädigungen hervorrufen.
7. Die Belüftungsöffnungen dienen der Luftzirkulation, die das Gerät vor Überhitzung schützt. Sorgen Sie dafür, daß diese Öffnungen nicht abgedeckt werden.
8. Beachten Sie beim Anschluß an das Stromnetz die Anschlußwerte.
9. Verlegen Sie die Netzanschlußleitung so, daß niemand darüber fallen kann. Es sollte auch nichts auf der Leitung abgestellt werden.
10. Alle Hinweise und Warnungen, die sich am Gerät befinden, sind zu beachten.
11. Wird das Gerät über einen längeren Zeitraum nicht benutzt, sollten Sie es vom Stromnetz trennen. Somit wird im Falle einer Überspannung eine Beschädigung vermieden.
12. Durch die Lüftungsöffnungen dürfen niemals Gegenstände oder Flüssigkeiten in das Gerät gelangen. Dies könnte einen Brand bzw. elektrischen Schlag auslösen.
13. Öffnen sie niemals das Gerät. Das Gerät darf aus Gründen der elektrischen Sicherheit nur von autorisiertem Servicepersonal geöffnet werden.
14. Wenn folgende Situationen auftreten ist das Gerät vom Stromnetz zu trennen und von einer qualifizierten Servicestelle zu überprüfen:
 - a. Netzkabel oder Netzstecker sind beschädigt.
 - b. Flüssigkeit ist in das Gerät eingedrungen.
 - c. Das Gerät war Feuchtigkeit ausgesetzt.
 - d. Wenn das Gerät nicht der Bedienungsanleitung entsprechend funktioniert oder Sie mit Hilfe dieser Anleitung keine Verbesserung erzielen.
 - e. Das Gerät ist gefallen und/oder das Gehäuse ist beschädigt.
 - f. Wenn das Gerät deutliche Anzeichen eines Defektes aufweist.
15. Zum Netzanschluß dieses Gerätes ist eine geprüfte Leitung zu verwenden. Für einen Nennstrom bis 6 A und einem Gerätegewicht größer 3 kg ist eine Leitung nicht leichter als H05VV-F, 3G, 0.75 mm² einzusetzen.

Der arbeitsplatzbezogene Schalldruckpegel nach DIN 45 635 Teil 1000 beträgt 70 dB(A) oder weniger.

TABLE OF CONTENTS

Introduction	1-1
About the Barricade	1-1
VoIP (Voice over IP)	1-1
Features and Benefits	1-2
Applications	1-3
Installation	2-1
Package Contents	2-1
System Requirements	2-2
Hardware Description	2-2
LED Indicators	2-4
ISP Settings	2-5
Connect the System	2-5
Phone/FAX Connection	2-5
Connect the ADSL Line	2-6
Phone Line Configuration	2-6
Attach to Your Network Using Ethernet Cabling	2-8
Connect the Power Adapter	2-8
Configuring Client PC	3-1
TCP/IP Configuration	3-2
Windows 2000	3-3
Disable HTTP Proxy	3-4
Obtain IP Settings from Your Barricade	3-4
Windows XP	3-6
Disable HTTP Proxy	3-6
Obtain IP Settings from Your Barricade	3-6
Configuring Your Macintosh Computer	3-8
Disable HTTP Proxy	3-9

Configuring the Voice ADSL Router	4-1
Navigating the Management Interface	4-2
Making Configuration Changes	4-3
Setup Wizard	4-4
Channel and SSID	4-4
Time Zone	4-5
Parameter Setting	4-6
Confirm	4-7
Parameter Setting - Country or ISP Not Listed	4-9
Advanced Setup	4-16
System	4-18
WAN	4-22
LAN	4-30
Wireless	4-31
NAT	4-39
Routing	4-44
Firewall	4-48
SNMP	4-61
UPnp	4-63
ADSL	4-64
DDNS	4-68
VOIP	4-69
QOS	4-80
Tools	4-81
Status	4-84
Finding the MAC address of a Network Card	4-87
Windows NT4/2000/XP	4-87
Macintosh	4-87
Linux	4-87
Troubleshooting	A-1

Cables	B-1
Ethernet Cable	B-1
Specifications	B-1
Wiring Conventions	B-1
RJ-45 Port Connection	B-2
Pin Assignments	B-3
ADSL Cable	B-5
Specifications	B-5
Wiring Conventions	B-5
Specifications	C-1

CHAPTER 1

INTRODUCTION

Congratulations on your purchase of the Barricade™ g Voice ADSL Router, hereafter referred to as the “Barricade”. We are proud to provide you with a powerful yet simple communication device for connecting your local area network (LAN) to the Internet. For those who want to surf the Internet in the most secure way, this router provides a convenient and powerful solution. The VoIP Router also enables service providers to provide their residential and small office home office (SOHO) customers with high-quality VoIP service using traditional analog telephones and fax machines.

About the Barricade

The Barricade provides Internet access to multiple users by sharing a single-user account. Support is provided for both wired and wireless devices. This device also provides wireless security via Wired Equivalent Privacy (WEP) encryption and MAC address filtering. It is simple to configure and can be up and running in minutes.

VoIP (Voice over IP)

Using Voice over IP (VoIP), instead of making calls over the regular telephone network, calls are made over computer (IP) networks, either through your Internet Service Provider's connection or through your local network. Calls made to another Internet telephone, anywhere in the world, are generally free, while calls made to a regular telephone are generally much cheaper than traditional long distance calls. The basic steps involved in VoIP include the conversion of an analog voice signal to

digital, the encoding and then compression of the signal into Internet Protocol (IP) packets. The VoIP Router is equipped with a digital signal processor (DSP), which segments the voice signal into frames and stores them in voice packets. Using the industry standard CODECs, G.711, G.723.3 and G.729, these packets are encoded. These IP packets are then transmitted in accordance with International Telecommunications Union specification H.323 over the Internet to their destination where the process is reversed.

Features and Benefits

- Internet connection to an ADSL modem via an RJ-11 ADSL port
- Local network connection via four 10/100 Mbps Ethernet ports
- On-board IEEE 802.11g wireless network adapter
- DHCP for dynamic IP configuration, and DNS for domain name mapping
- Firewall with Stateful Packet Inspection, client privileges, intrusion detection, and NAT
- NAT also enables multi-user Internet access via a single user account, and virtual server functionality (providing protected access to Internet services such as web, FTP, e-mail, and Telnet)
- VPN pass-through (IPSec-ESP Tunnel mode, L2TP, PPTP)
- User-definable application sensing tunnel supports applications requiring multiple connections
- Easy setup through a web browser on any operating system that supports TCP/IP
- Compatible with all popular Internet applications

Applications

Many advanced networking features are provided by the Barricade:

- **Wireless and Wired LAN**

The Barricade provides connectivity to 10/100 Mbps devices, and wireless IEEE 802.11g compatible devices, making it easy to create a network in small offices or homes.

- **Internet Access**

This device supports Internet access through an ADSL connection. Since many DSL providers use PPPoE or PPPoA to establish communications with end users, the Barricade includes built-in clients for these protocols, eliminating the need to install these services on your computer.

- **Shared IP Address**

The Barricade provides Internet access for up to 253 users via a single shared IP address. Using only one ISP account, multiple users on your network can access the Internet at the same time.

- **Virtual Server**

If you have a fixed IP address, you can set the Barricade to act as a virtual host for network address translation. Remote users access various services at your site using a constant IP address. Then, depending on the requested service (or port number), the Barricade can route the request to the appropriate server (at another internal IP address). This secures your network from direct attack by hackers, and provides more flexible management by allowing you to change internal IP addresses without affecting outside access to your network.

- **DMZ Host Support**

Allows a networked computer to be fully exposed to the Internet. This function is used when NAT and firewall security prevent an Internet application from functioning correctly.

- **Security**

The Barricade supports security features that deny Internet access to specified users, or filter all requests for specific services that the administrator does not want to serve. The Barricade's firewall also blocks common hacker attacks, including IP Spoofing, Land Attack, Ping of Death, IP with zero length, Smurf Attack, UDP port loopback, Snork Attack, TCP null scan, and TCP SYN flooding.

- **Virtual Private Network (VPN)**

The Barricade supports three of the most commonly used VPN protocols — PPTP, L2TP, and IPSec. These protocols allow remote users to establish a secure connection to their corporate network. If your service provider supports VPNs, then these protocols can be used to create an authenticated and encrypted tunnel for passing secure data over the Internet (i.e., a traditionally shared data network). The VPN protocols supported by the Barricade are briefly described below.

- **Point-to-Point Tunneling Protocol** — Provides a secure tunnel for remote client access to a PPTP security gateway. PPTP includes provisions for call origination and flow control required by ISPs.
- **L2TP** merges the best features of PPTP and L2F — Like PPTP, L2TP requires that the ISP's routers support the protocol.
- **IP Security** — Provides IP network-layer encryption. IPSec can support large encryption networks (such as the Internet) by using digital certificates for device authentication.

CHAPTER 2

INSTALLATION

Before installing the Barricade™ g Voice ADSL Router, verify that you have all the items listed under the Package Contents list. If any of the items are missing or damaged, contact your local distributor. Also be sure that you have all the necessary cabling before installing the Barricade. After installing the Barricade, refer to “Configuring the Voice ADSL Router” on page 4-1.

Package Contents

After unpacking the Barricade, check the contents of the box to be sure you have received the following components:

- Barricade Voice ADSL Router (SMC7908VoWBRA)
- Power adapter
- One CAT-5 Ethernet cable (RJ-45)
- Telephone patch cable (RJ-11)
- Documentation CD

Immediately inform your dealer in the event of any incorrect, missing, or damaged parts. If possible, please retain the carton and original packing materials in case there is a need to return the product.

System Requirements

You must meet the following minimum requirements:

- ADSL line installed by your Internet Service Provider.
- A PC using a dynamic or fixed IP address, as well as a gateway server address and DNS server address from your service provider.
- A computer equipped with a 10/100 Mbps network adapter, a USB-to-Ethernet converter or an IEEE 802.11g wireless network adapter.
- TCP/IP network protocols installed on each PC that will access the Internet.
- A Java-enabled web browser, such as Microsoft Internet Explorer 5.5 or above installed on one PC at your site for configuring the Barricade.

Hardware Description

The Barricade contains an integrated ADSL modem and connects to the Internet or to a remote site using its RJ-11 WAN port. It can be connected directly to your PC or to a local area network using any of the four Fast Ethernet LAN ports.

Access speed to the Internet depends on your service type. Full-rate ADSL provides up to 8 Mbps downstream and 640 kbps upstream. G.lite (or splitterless) ADSL provides up to 1.5 Mbps downstream and 512 kbps upstream. However, you should note that the actual rate provided by specific service providers may vary dramatically from these upper limits.

Data passing between devices connected to your local area network can run at up to 100 Mbps over the Fast Ethernet ports and 54 Mbps over the built-in wireless network adapter.

The Barricade includes an LED display on the front panel for system power and port indications that simplifies installation and network troubleshooting. It also provides the following ports on the rear panel:

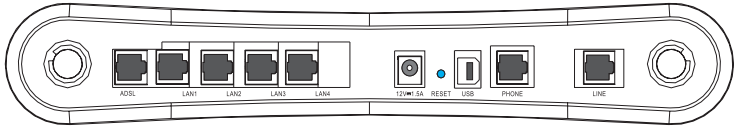


Figure 2-1. Rear Panel

Item	Description
Line	Connect the telephone line directly to this port.
Phone	Connect your regular telephone to this port.
USB	Connect your USB device to this port.
Reset Button	Use this button to reset the power and restore the default factory settings. To reset without losing configuration settings, see “Reset” on page 4-83.
Power Inlet	Connect the included power adapter to this inlet. Warning: Using the wrong type of power adapter may damage the Barricade.
LAN Ports	Fast Ethernet ports (RJ-45). Connect devices on your local area network to these ports (i.e., a PC, hub, or switch).
ADSL Port	WAN port (RJ-11). Connect your ADSL line to this port.

LED Indicators

The power and port LED indicators on the front panel are illustrated by the following figure and table.

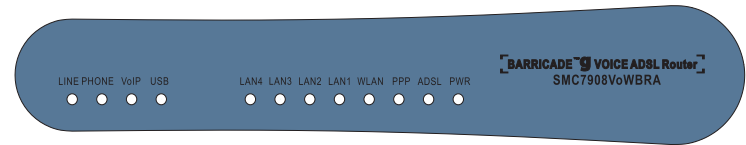


Figure 2-2. Front Panel

LED	Status	Description
PWR	On	The Barricade is receiving power. Normal operation.
	Off	Power off or failure.
ADSL SYNC	On	ADSL connection is functioning correctly.
	Flashing	The Barricade is establishing an ADSL link.
	Off	ADSL connection is not established.
WLAN	Flashing	The WLAN port is sending or receiving data.
USB	On	USB device is connected to this port.
	Off	no connection.
LAN (4 LEDs)	On	Ethernet connection is established.
	Flashing	The indicated LAN port is sending or receiving data.
	Off	There is no LAN connection on the port.
VoIP	On	The VoIP connection is up and connected.
Line	On	VoIP call in progress.
	Off	No call in progress.
Phone	On	VoIP call in progress.
	Off	No call in progress.

ISP Settings

Please collect the following information from your ISP before setting up the Barricade:

- ISP account user name and password
- VoIP setting details
- Protocol, encapsulation and VPI/VCI circuit numbers
- DNS server address
- IP address, subnet mask and default gateway (for fixed IP users only)

Connect the System

The Barricade can be positioned at any convenient location in your office or home. It also can be wall-mounted. No special wiring or cooling requirements are needed. You should, however, comply with the following guidelines:

- Keep the Barricade away from any heating devices.
- Do not place the Barricade in a dusty or wet environment.

You should also remember to turn off the power, remove the power cord from the outlet, and keep your hands dry when you install the Barricade.

Phone/FAX Connection

Connect a standard telephone set or fax machine to the Phone (FXS) port on the rear panel.

Connect the ADSL Line

Connect the supplied RJ-11 cable from the ADSL Microfilter/Splitter to the ADSL port on your Barricade. When inserting an ADSL RJ-11 plug, be sure the tab on the plug clicks into position to ensure that it is properly seated.

Phone Line Configuration

Installing a Full-Rate Connection

If you are using a full-rate (G.dmt) connection, your service provider will attach the outside ADSL line to a data/voice splitter. In this case you can connect your phones and computer directly to the splitter as shown below:

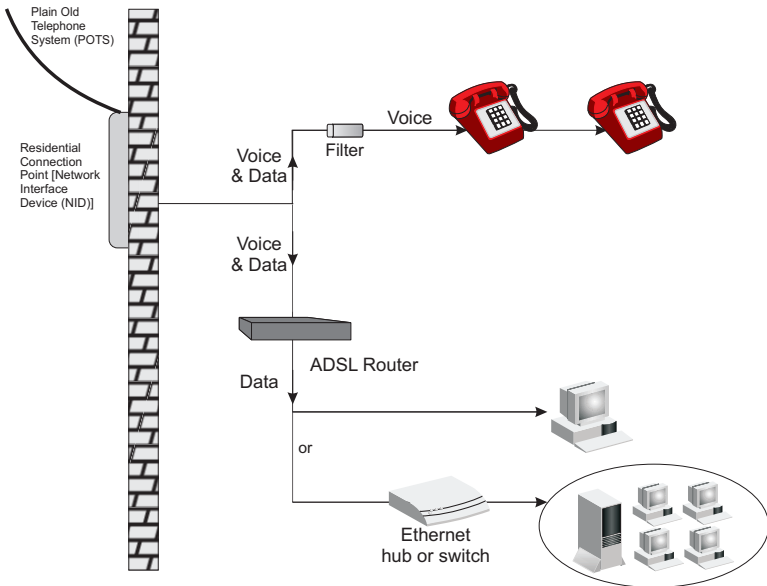


Figure 2-3. Installing with a Splitter

Installing a Splitterless Connection

If you are using a splitterless (G.lite) connection, then your service provider will attach the outside ADSL line directly to your phone system. In this case you can connect your phones and computer directly to the incoming ADSL line, but you will have to add low-pass filters to your phones as shown below:

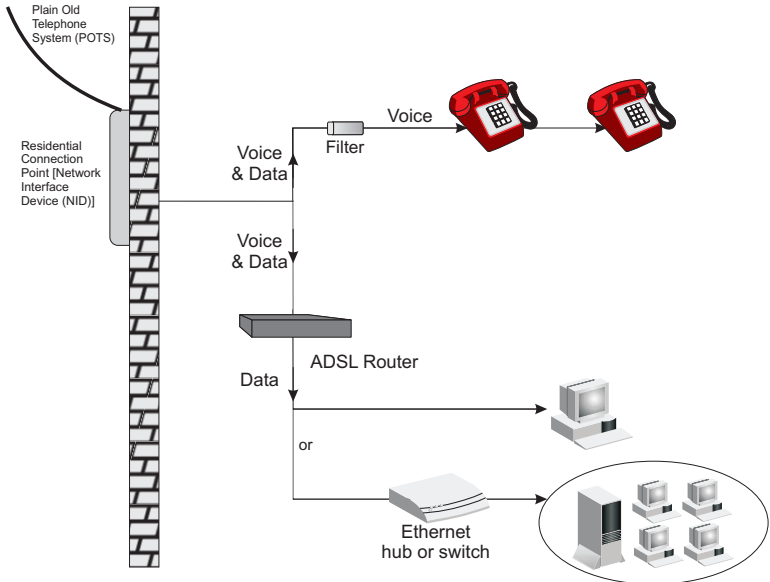


Figure 2-4. Installing without a Splitter

Attach to Your Network Using Ethernet Cabling

The four LAN ports on the Barricade auto-negotiate the connection speed to 10 Mbps Ethernet or 100 Mbps Fast Ethernet, as well as the transmission mode to half duplex or full duplex.

Use RJ-45 cables to connect any of the four LAN ports on the Barricade to an Ethernet adapter on your PC. Otherwise, cascade any of the LAN ports on the Barricade to an Ethernet hub or switch, and then connect your PC or other network equipment to the hub or switch. When inserting an RJ-45 connector, be sure the tab on the connector clicks into position to ensure that it is properly seated.

Warning: Do not plug a phone jack connector into an RJ-45 port. This may damage the Barricade.

- Notes:**
1. Use 100-ohm shielded or unshielded twisted-pair cable with RJ-45 connectors for all Ethernet ports. Use Category 3, 4, or 5 for connections that operate at 10 Mbps, and Category 5 for connections that operate at 100 Mbps.
 2. Make sure each twisted-pair cable length does not exceed 100 meters (328 feet).

Connect the Power Adapter

Plug the power adapter into the power socket on the rear of the Barricade, and the other end into a power outlet.

Check the power indicator on the front panel is lit. If the power indicator is not lit, refer to “Troubleshooting” on page A-1.

In case of a power input failure, the Barricade will automatically restart and begin to operate once the input power is restored.

CHAPTER 3

CONFIGURING CLIENT PC

After completing hardware setup by connecting all your network devices, you need to configure your computer to connect to the Barricade.

See:

“Windows 2000” on page 3-3

“Windows XP” on page 3-6

or

“Configuring Your Macintosh Computer” on page 3-8

depending on your operating system.

TCP/IP Configuration

To access the Internet through the Barricade, you must configure the network settings of the computers on your LAN to use the same IP subnet as the Barricade. The default IP settings for the Barricade are:


IP Address: 192.168.2.1

Subnet Mask: 255.255.255.0


Note: These settings can be changed to fit your network requirements, but you must first configure at least one computer to access the Barricade's web configuration interface in order to make the required changes. (See "Configuring the Voice ADSL Router" on page 4-1 for instruction on configuring the Barricade.)

Windows 2000

1. On the Windows desktop, click Start/Settings/Network and Dial-Up Connections.
2. Click the icon that corresponds to the connection to your Barricade.
3. The connection status screen will open. Click Properties.

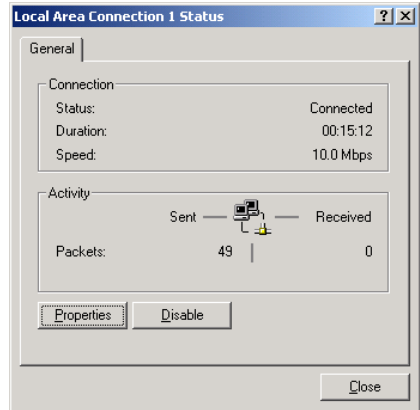

4. Double-click Internet Protocol (TCP/IP).
5. If “Obtain an IP address automatically” and “Obtain DNS server address automatically” are already selected, your computer is already configured for DHCP. If not, select this option.

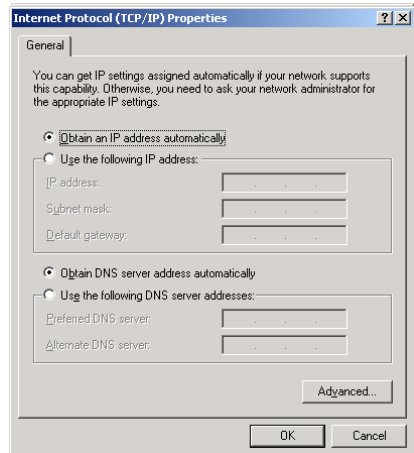


Disable HTTP Proxy

You need to verify that the “HTTP Proxy” feature of your web browser is disabled. This is so that your browser can view the Barricade’s HTML configuration pages. Determine which browser you use and refer to “Internet Explorer” on page 3-4.


Obtain IP Settings from Your Barricade

Now that you have configured your computer to connect to your Barricade, it needs to obtain new network settings. By releasing old DHCP IP settings and renewing them with settings from your Barricade, you can verify that you have configured your computer correctly.


1. On the Windows desktop, click Start/Programs/Accessories/Command Prompt.

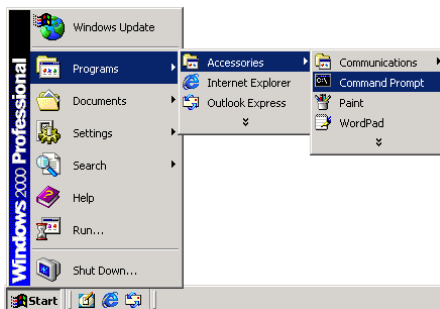

2. In the Command Prompt window, type “IPCONFIG /RELEASE” and press the ENTER key.

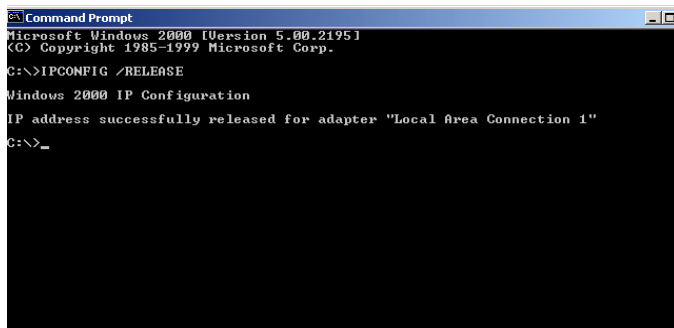

3. Type “IPCONFIG /RENEW” and press the ENTER key. Verify that your IP Address is now **192.168.2.xxx**, your Subnet Mask is **255.255.255.0** and your Default Gateway is **192.168.2.254**. These values confirm that your ADSL Router is functioning.

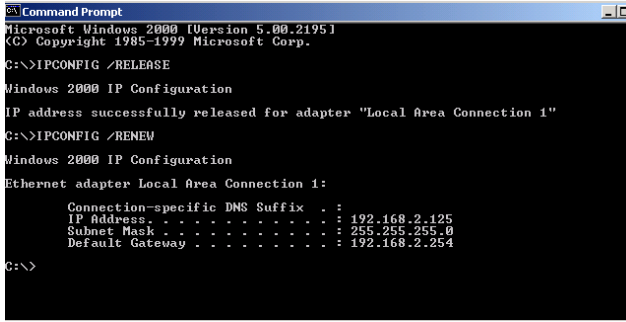

```
Command Prompt
Microsoft Windows [Version 5.00.21951]
(C) Copyright 1985-1999 Microsoft Corp.

C:\>IPCONFIG /RELEASE

Windows 2000 IP Configuration

IP address successfully released for adapter "Local Area Connection 1"

C:\>IPCONFIG /RENEW

Windows 2000 IP Configuration

Ethernet adapter Local Area Connection 1:

    Connection-specific DNS Suffix  . : 
    IP Address. . . . . : 192.168.2.125
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.2.254

C:\>
```

4. Type “EXIT” and press the ENTER key to close the Command Prompt window.

Your computer is now configured to connect to the Barricade.

Windows XP

1. On the Windows desktop, click Start/Control Panel.
2. In the Control Panel window, click Network and Internet Connections.
3. The Network Connections window will open. Double-click the connection for this device.
4. On the connection status screen, click Properties.
5. Double-click Internet Protocol (TCP/IP).
6. If “Obtain an IP address automatically” and “Obtain DNS server address automatically” are already selected, your computer is already configured for DHCP. If not, select this option.

Disable HTTP Proxy

You need to verify that the “HTTP Proxy” feature of your web browser is disabled. This is so that your browser can view the Barricade’s HTML configuration pages. Determine which browser you use and refer to “Internet Explorer” on page 3-4.

Obtain IP Settings from Your Barricade

Now that you have configured your computer to connect to your Barricade, it needs to obtain new network settings. By releasing old DHCP IP settings and renewing them with settings from your Barricade, you can verify that you have configured your computer correctly.

1. On the Windows desktop, click Start/Programs/Accessories/Command Prompt.
2. In the Command Prompt window, type “IPCONFIG /RELEASE” and press the ENTER key.
3. Type “IPCONFIG /RENEW” and press the ENTER key. Verify that your IP Address is now **192.168.2.xxx**, your Subnet Mask is **255.255.255.0** and your Default Gateway is **192.168.2.254**. These values confirm that your ADSL router is functioning.


Type “EXIT” and press the ENTER key to close the Command Prompt window.



Your computer is now configured to connect to the Barricade.

Configuring Your Macintosh Computer


You may find that the instructions here do not exactly match your operating system. This is because these steps and screenshots were created using Mac OS 10.2. Mac OS 7.x and above are similar, but may not be identical to Mac OS 10.2.

Follow these instructions:

1. Pull down the Apple Menu . Click System Preferences
2. Double-click the Network icon in the Systems Preferences window.

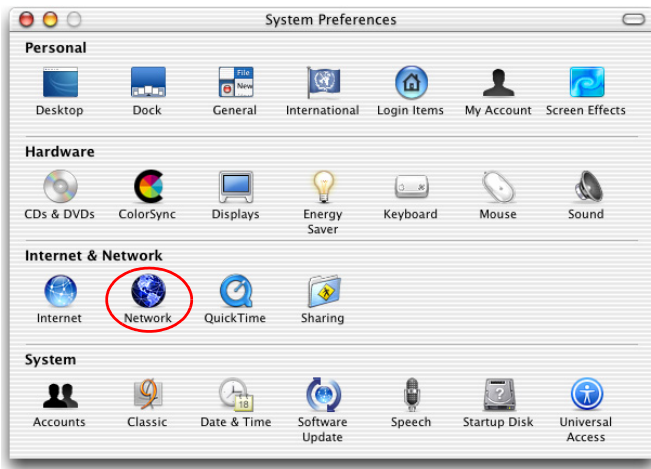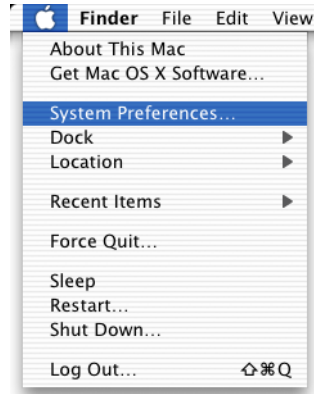

3. If “Using DHCP Server” is already selected in the Configure field, your computer is already configured for DHCP. If not, select this Option.

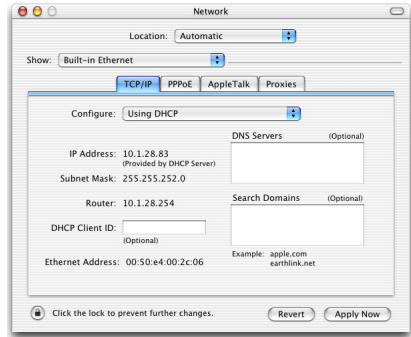

4. Your new settings are shown on the TCP/IP tab. Verify that your IP Address is now **192.168.2.xxx**, your Subnet Mask is **255.255.255.0** and your Default Gateway is **192.168.2.1**. These values confirm that your Barricade is functioning.
5. Close the Network window.


Now your computer is configured to connect to the Barricade.

Disable HTTP Proxy


You need to verify that the “HTTP Proxy” feature of your web browser is disabled. This is so that your browser can view the Barricade’s HTML configuration pages. The following steps are for Internet Explorer.

Internet Explorer

1. Open Internet Explorer and click the Stop button. Click Explorer/Preferences.
2. In the Internet Explorer Preferences window, under Network, select Proxies.

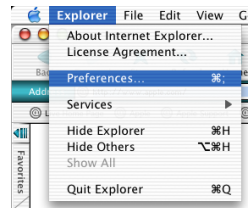

3. Uncheck all check boxes and click OK.

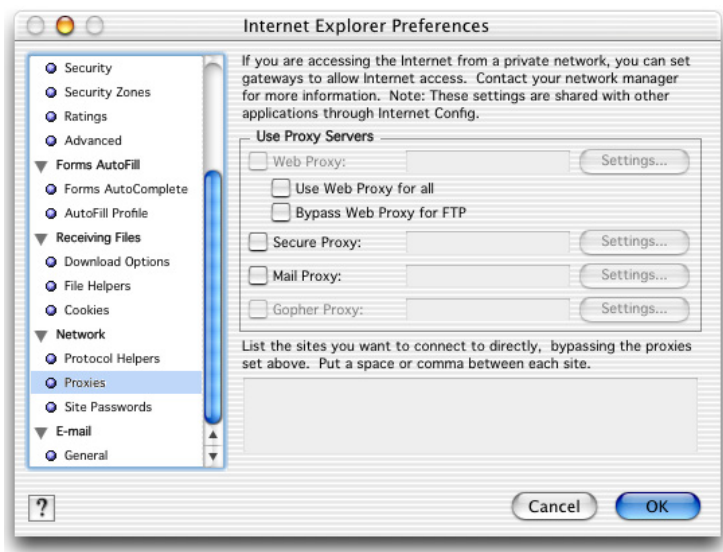


CHAPTER 4

CONFIGURING THE VOICE ADSL ROUTER

After you have configured TCP/IP on a client computer, you can configure the Barricade using Internet Explorer 5.5 or above.

To access the Barricade's management interface, enter the default IP address of the Barricade in your web browser: <http://192.168.2.1>. Enter the default password: "smcadmin", and click "LOGIN".

Note: Passwords can contain from 3~12 alphanumeric characters and are case sensitive.

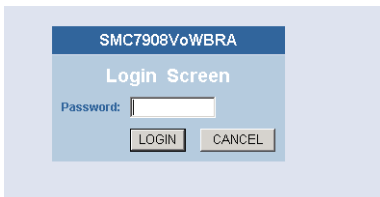The image shows a web browser window displaying the login screen for a device labeled "SMC7908VoWBRA". The title of the window is "Login Screen". Below the title, there is a label "Password:" followed by a text input field. At the bottom of the login area, there are two buttons: "LOGIN" and "CANCEL". The entire login interface is set against a light blue background.


SMC7908VoWBRA

Login Screen


Password:

Navigating the Management Interface

The first page of the web management is Country Selection. You need to select your country before accessing the management interface.

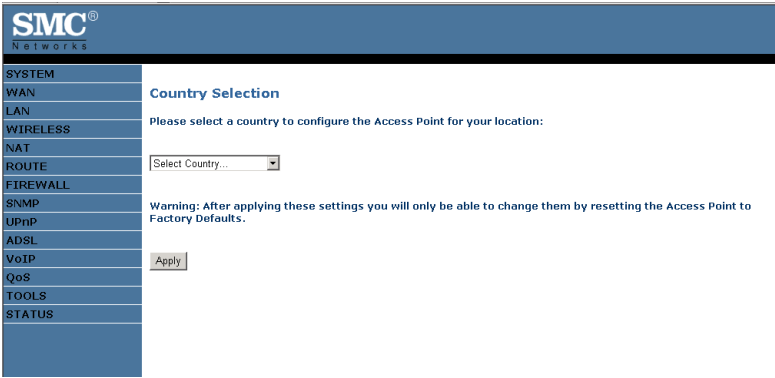

The Barricade's management interface consists of a Setup Wizard and an Advanced Setup section.

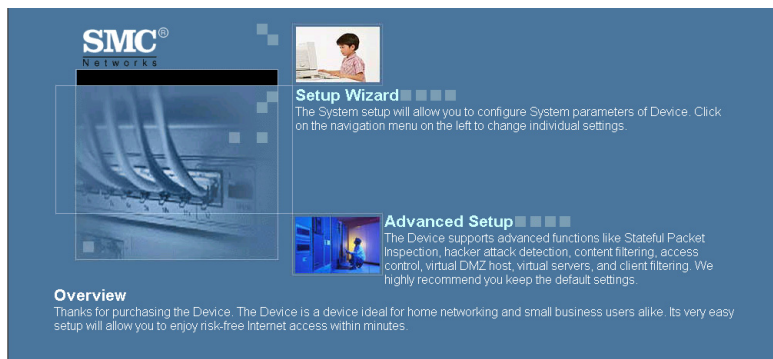

Setup Wizard: Use the Setup Wizard if you want to quickly set up the Barricade. Go to “SETUP WIZARD” on page 4.

Advanced Setup: Advanced Setup supports more advanced functions like VoIP, Firewall, IP and MAC address filtering, virtual server setup, virtual DMZ host, as well as other functions. Go to “Advanced Setup” on page 4-16.

Making Configuration Changes


Configurable parameters have a dialog box or a drop-down list. Once a configuration change has been made on a page, click the “APPLY” “SAVE SETTINGS” or “NEXT” button at the bottom of the page to enable the new setting.

Note: To ensure proper screen refresh after a command entry, be sure that Internet Explorer 5.5 is configured as follows: Under the menu Tools/Internet Options/General/Temporary Internet Files/Settings, the setting for “Check for newer versions of stored pages” should be “Every visit to the page.”

SETUP WIZARD

Channel and SSID

Click on “SETUP WIZARD” and “NEXT”, then you will see the Channel and SSID page.

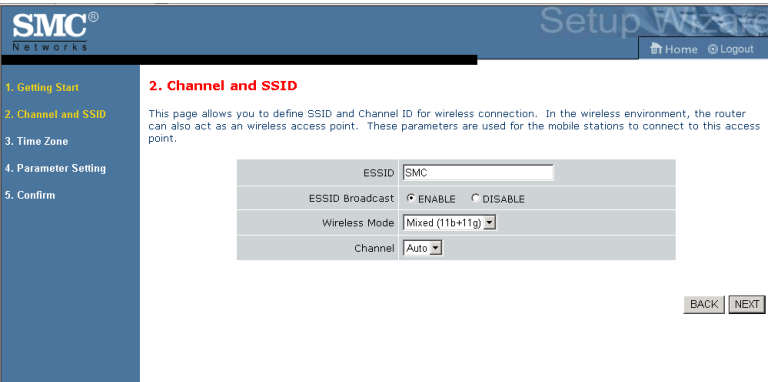

Parameter	Description
ESSID	Extended Service Set ID. The ESSID must be the same on the Barricade and all of its wireless clients.
ESSID Broadcast	Enable or disable the broadcasting of the SSID.
Wireless Mode	This device supports both 11g and 11b wireless networks. Make your selection depending on the type of wireless network that you have.
Channel	The radio channel used by the wireless router and its clients to communicate with each other. This channel must be the same on the Barricade and all of its wireless clients. The Barricade will automatically assign itself a radio channel, or you may select one manually.

Click “NEXT” to continue.

Time Zone

Select your local time zone from the drop down list. This information is used for log entries and client filtering.

SMC® Networks Setup Wizard

Home Logout

1. Getting Start
2. Channel and SSID
3. Time Zone
 4. Parameter Setting
 5. Confirm

3. Time Settings

Set the time zone for the ADSL Modem. Use this setting to insure the time-based client filtering feature and system log entries are based on the correct localized time.

Set Time Zone (GMT-08:00)Pacific Time (US & Canada), Tijuana ▼

Configure Time Server (NTP):

You can automatically maintain the system time on your ADSL router by synchronizing with a public time server over the Internet.

☒ Enable Automatic Time Server Maintenance

When you enable this option you will need to configure two different time servers, use the options below to set the primary and secondary NTP servers in your area:

Primary Server: 132.163.4.102 - North America ▼

Secondary Server: 192.5.41.41 - North America ▼

BACK NEXT

For accurate timing of log entries and system events, you need to set the time zone. Select your time zone from the drop down list.

If you want to automatically synchronize the Voice ADSL router with a public time server, check the box to Enable Automatic Time Server Maintenance. Select the desired servers from the drop down menu.

Parameter Setting

Select your Country and Internet Service Provider. This will automatically configure the Barricade with the correct Protocol, Encapsulation and VPI/VCI settings for your ISP.

The screenshot shows the SMC Networks Setup Wizard interface. The title bar includes the SMC Networks logo and the text 'Setup Wizard'. On the right of the title bar are 'Home' and 'Logout' links. A left sidebar contains a list of steps: 1. Getting Start, 2. Channel and SSID, 3. Time Zone, 4. Parameter Setting (highlighted in blue), and 5. Confirm. The main content area is titled '4. Parameters Setting' in red. Below the title, it says 'Please select the network your Network Provider/Internet Provider is using :'. There are four input fields: 'Country' with a dropdown menu showing 'Others', 'Internetserviceprovider' with a dropdown menu showing 'Unknown ISP', 'Protocol' with a dropdown menu showing '---', and 'Management IP Address' with a text box containing '192.168.2.1'. At the bottom right of the form are 'BACK' and 'NEXT' buttons.

Country	Others
Internetserviceprovider	Unknown ISP
Protocol	---
Management IP Address	192.168.2.1

If your Country or Internet Service Provider is not listed in this page, you will need to manually enter settings. Go to “Parameter Setting - Country or ISP Not Listed” on page 4-9 in the manual.

If your ISP uses Protocols PPPoA or PPPoE you will need to enter the username, password and DNS Server address supplied by your ISP.

If your ISP uses Protocol RFC1483 Routed you will need to enter the IP address, Subnet Mask, Default Gateway and DNS Server address supplied by your ISP.

Note: By default 192.168.2.1 is set for the DNS Server address, this needs to be changed to reflect your ISP’s DNS Server address.

Click “NEXT” to continue.

Confirm

The Confirm page shows a summary of the configuration parameters. Check ADSL operation mode (WAN), Network Layer Parameters (WAN) and ISP parameters are correct.

SMC® Networks Setup Wizard Home Logout

5. Confirm

You have filled in the following Configuration Parameters:

- ADSL operation mode (WAN):**

ISP	Grande Communication-PPPoE
Protocol	PPPoE
VPI / VCI	0 / 35
AAL5 Encapsulation	LLC
- Network Layer Parameters (WAN):**

DNS Server	0.0.0.0
------------	---------
- ISP Parameters:**

User Name	
Password	
- DHCP Parameters:**

Function	Enable
Default Gateway	192.168.2.1
Subnet Mask	255.255.255.0
Name Server 1	192.168.2.1
Name Server 2	0.0.0.0
Start IP Address	192.168.2.2
Number of IP	253

BACK NEXT

Parameter	Description
ADSL Operation Mode (WAN)	
ISP	The type of ISP you have selected.
Protocol	Indicates the protocol used.
VPI/VCI	Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI).
AAL5 Encapsulation	Shows the packet encapsulation type. Go to page 4-23 for a detailed description.
Network Layer Parameters (WAN)	
IP Address	WAN IP address (only displayed if you have static IP).
Subnet Mask	WAN subnet mask (only displayed if you have static IP).
Default Gateway	WAN gateway (only displayed if you have static IP).

Parameter	Description
DNS Server	The IP address of the DNS server.
ISP Parameters	
Username	The ISP assigned user name.
Password	The password (hidden).
DHCP Parameters	
Function	Shows the DHCP function is enabled or disabled.
Default Gateway	LAN IP address of the Barricade.
Subnet Mask	The network subnet mask.
Name Server 1	Primary DNS server IP address.
Name Server 2	Alternate DNS server IP address.
Start IP Address	Start IP address of DHCP assigned IP addresses.
Number of IP	Number of IP addresses available for assignment by the DHCP server.

If the parameters are correct, click “NEXT” to save these settings.

Your Barricade is now set up. Go to “Troubleshooting” on page A-1 if you cannot make a connection to the Internet.

Parameter Setting - Country or ISP Not Listed

If your Country or Internet Service Provider is not listed select “Others”. This will allow you to manually configure your ISP settings.

For manual configuration you will need to know the Protocol, DNS Server, Encapsulation and VPI/VCI settings used by your ISP. If you have a Static IP address you will also need to know the IP address, Subnet Mask and Gateway address. Please contact your ISP for these details if you do not already have them.

After selecting “Others” you will be required to select what Protocol your ISP uses from the “Internet Service Provider” drop down list.

SMC® Networks Setup Wizard [Home](#) [Logout](#)

1. Getting Start
2. Channel and SSID
3. Time Zone
4. Parameter Setting
5. Confirm

4. Parameters Setting

Please select the network your Network Provider/Internet Provider is using :

Country	Others
Internet Service Provider	Unknown ISP
Protocol	Unknown ISP ISP use Bridging ISP use 1483Bridging-DHCP ISP use 1483Bridging-FluxIP ISP use PPPoE ISP use PPPoA ISP use 1483Routing
Management IP Address	

[BACK](#) [NEXT](#)

ISP use Bridging

Enter the Bridging settings provided by your ISP.

SMC®
Networks

Setup Wizard

Home Logout

1. Getting Start

2. Channel and SSID

3. Time Zone

4. Parameter Setting

5. Confirm

4. Parameters Setting

Please select the network your Network Provider/Internet Provider is using :

Country

Others

Internet service provider

ISP use Bridging

Protocol

Bridging

Management IP Address

192.168.2.1

VPI/VCI

0 / 33

Encapsulation

LLC

BACK

NEXT

Parameter	Description
Management IP Address	Enter the IP address provided by your ISP. (Default: 192.168.2.1)
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.

Click “NEXT” to continue to the “Confirm” settings page.

Go to “Confirm” on page 4-7 in the manual for details about the “Confirm” settings page.

ISP use 1483Bridging-DHCP

SMC® Networks Setup Wizard

Home Logout

1. Getting Start
2. Channel and SSID
3. Time Zone
4. Parameter Setting
5. Confirm

4. Parameters Setting

Please select the network your Network Provider/Internet Provider is using :

Country	Others
Intenetserviceprovider	ISP use 1483Bridging-DHCP
Protocol	1483 Bridging - DHCP
DNS Server	
VPI/VCI	0 / 33
Encapsulation	LLC

BACK NEXT

Parameter	Description
DNS Server	Domain Name Servers are used to map a domain name (e.g., www.somesite.com) to the equivalent numerical IP address. Your ISP should provide the IP address of a Domain Name Server. Enter the address on this page
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.

Click “NEXT” to continue to the “Confirm” settings page.

Go to “Confirm” on page 4-7 in the manual for details about the “Confirm” settings page.

ISP use 1483Bridging-FixIP

SMC®
Networks

Setup Wizard

Home Logout

1. Getting Start

2. Channel and SSID

3. Time Zone

4. Parameter Setting

5. Confirm

4. Parameters Setting

Please select the network your Network Provider/Internet Provider is using :

CountryOthers

InterserviceproviderISP use 1483Bridging-FixIP

Protocol1483 Bridging - Fix IP

IP Address0.0.0.0

Subnet Mask0.0.0.0

Default Gateway0.0.0.0

DNS Server

VPI/VCI0 /33

EncapsulationLLC

BACK

NEXT

Parameter	Description
IP Address	Enter your ISP supplied static IP address here
Subnet Mask	Enter the subnet mask address provided by your ISP.
Default Gateway	Enter the gateway address provided by your ISP.
DNS Server	Enter the Domain Name Server address.
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.

Click “NEXT” to continue to the “Confirm” settings page.

Go to “Confirm” on page 4-7 in the manual for details about the “Confirm” settings page.

ISP use PPPoE

SMC® Networks Setup Wizard

Home Logout

1. Getting Start
2. Channel and SSID
3. Time Zone
4. Parameter Setting
5. Confirm

4. Parameters Setting

Please select the network your Network Provider/Internet Provider is using :

Country: Others
 Internet service provider: ISP use PPPoE
 Protocol: PPPoE
 DNS Server:
 VPI/VCI: 0 / 33
 Encapsulation: LLC
 Username:
 Password:
 Confirm Password:

BACK NEXT

Parameter	Description
DNS Server	Enter the Domain Name Server address.
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.
Username	Enter user name.
Password	Enter password.
Confirm Password	Confirm password

Click “NEXT” to continue to the “Confirm” settings page.

Go to “Confirm” on page 4-7 in the manual for details about the “Confirm” settings page.

ISP use PPPoA

SMC®
Networks

Setup Wizard

Home Logout

1. Getting Start

2. Channel and SSID

3. Time Zone

4. Parameter Setting

5. Confirm

4. Parameters Setting

Please select the network your Network Provider/Internet Provider is using :

Country	Others
Interneteserviceprovider	ISP use PPPoA
Protocol	PPPoA
DNS Server	
VPI/VCI	0 /32
Encapsulation	VC MUX
Username	
Password	
Confirm Password	

BACK NEXT

Parameter	Description
DNS Server	Enter the Domain Name Server address.
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.
Username	Enter user name.
Password	Enter password.
Confirm Password	Confirm password

Click “NEXT” to continue to the “Confirm” settings page.

Go to “Confirm” on page 4-7 in the manual for details about the “Confirm” settings page.

ISP use 1483Routing

SMC® Networks Setup Wizard

Home Logout

1. Getting Start
2. Channel and SSID
3. Time Zone
4. Parameter Setting
5. Confirm

4. Parameters Setting

Please select the network your Network Provider/Internet Provider is using :

Country	Others
Internet service provider	ISP use 1483Routing
Protocol	1483 Routing
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
DNS Server	
VPI/VCI	0 / 33
Encapsulation	VC MUX

BACK NEXT


Parameter	Description
IP Address	Enter the IP address provided by your ISP.
Subnet Mask	Enter the subnet mask address provided by your ISP.
Default Gateway	Enter the gateway address provided by your ISP.
DNS Server	Enter the Domain Name Server address.
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.

Click “NEXT” to continue to the “Confirm” settings page.

Go to “Confirm” on page 4-7 in the manual for details about the “Confirm” settings page.

Advanced Setup

The left-hand side displays the main menu and the right-hand side shows descriptive information.

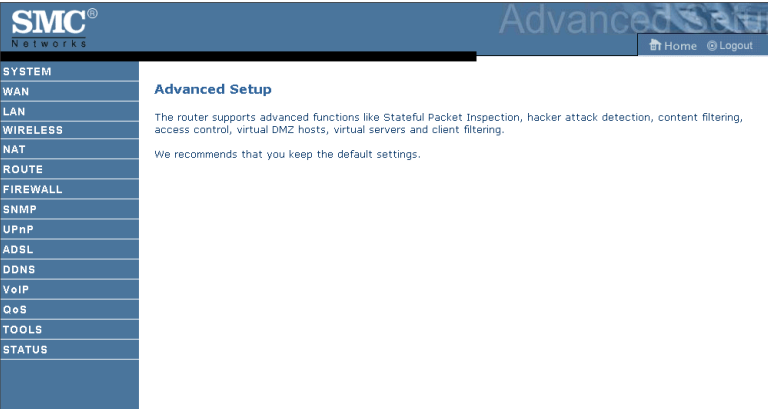

The advanced management interface contains 15 main menu items as described in the following table.

Menu	Description
System	Sets the local time zone, the password for administrator access, and the IP address of a PC that will be allowed to manage the Barricade remotely.
WAN	Specifies the Internet connection settings.
LAN	Sets the TCP/IP configuration for the Barricade LAN interface and DHCP clients.
Wireless	Configures the radio frequency, SSID, and security for wireless communications.
NAT	Configures Address Mapping, virtual server and special applications.
Route	Sets the routing parameters and displays the current routing table.
Firewall	Configures a variety of security and specialized functions including: Access Control, URL blocking, Internet access control scheduling, intruder detection, and DMZ.

Menu	Description
SNMP	Community string and trap server settings.
UPnP	Enables the Universal Plug and Play function.
ADSL	Sets the ADSL operation type and shows the ADSL status.
DDNS	Configures Dynamic DNS function.
VoIP	Configures VoIP settings for the VoIP Router, and view VoIP status log.
QoS	Allows you to optimize voice quality by prioritizing voice over data traffic.
Tools	Contains options to backup & restore the current configuration, restore all configuration settings to the factory defaults, update system firmware, or reset the system.
Status	Provides WAN connection type and status, firmware and hardware version numbers, system IP settings, as well as DHCP, NAT, and firewall information. Displays the number of attached clients, the firmware versions, the physical MAC address for each media interface, and the hardware version and serial number. Shows the security and DHCP client log.

SYSTEM

Time Settings

Select your local time zone from the drop down list. This information is used for log entries and client filtering.

SMC® Networks Advanced Setup [Home](#) [Logout](#)

SYSTEM

- Time Settings
- Password Settings
- Remote Management
- DNS
- WAN
- LAN
- WIRELESS
- NAT
- ROUTE
- FIREWALL
- SNMP
- UPnP
- ADSL
- DDNS
- VoIP
- QoS
- TOOLS
- STATUS

Time Settings

Set Time Zone:

Use this setting to insure the time-based client filtering feature and system log entries are based on the correct localized time.

(GMT-08:00)Pacific Time (US & Canada), Tijuana

Configure Time Server (NTP):

You can automatically maintain the system time on your ADSL router by synchronizing with a public time server over the Internet.

☒ Enable Automatic Time Server Maintenance

When you enable this option you will need to configure two different time servers, use the options below to set the primary and secondary NTP servers in your area:

Primary Server: 132.163.4.102 - North America

Secondary Server: 192.5.41.41 - North America

[HELP](#) [SAVE SETTINGS](#) [CANCEL](#)

For accurate timing of log entries and system events, you need to set the time zone. Select your time zone from the drop down list.

If you want to automatically synchronize the ADSL router with a public time server, check the box to Enable Automatic Time Server Maintenance. Select the desired servers from the drop down menu.

Password Settings

Use this page to change the password for accessing the management interface.

The screenshot shows the SMC Networks Advanced Setup web interface. On the left is a navigation menu with the following items: SYSTEM, Time Settings, Password Settings (highlighted), Remote Management, DNS, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The main content area is titled "Password Settings" and contains the following text: "Set a password to restrict management access to the router. If you want to manage the router from a remote location (outside of the local network), you must also specify the IP address of the remote PC. You can do this in the Firewall - Access Control menu." Below this text are three bullet points: "Current Password:" with a text input field, "New Password:" with a text input field, and "Re-Enter Password for Verification:" with a text input field. To the right of the "Current Password" field is a label "Idle Time Out: 10 Min" with a note "(Idle Time =0 : NO Time Out)". At the bottom right of the form are three buttons: "HELP", "SAVE SETTINGS", and "CANCEL".

Passwords can contain from 3~12 alphanumeric characters and are case sensitive.

Note: If you lost the password, or you cannot gain access to the user interface, press the blue reset button on the rear panel, holding it down for at least five seconds to restore the factory defaults. The default password is “smcadmin”.

Enter a maximum Idle Time Out (in minutes) to define a maximum period of time for which the login session is maintained during inactivity. If the connection is inactive for longer than the maximum idle time, it will perform system logout, and you have to log in again to access the management interface. (Default: 10 minutes)

Remote Management

By default, management access is only available to users on your local network. However, you can also manage the Barricade from a remote host by entering the IP address of a remote computer on this screen. Check the Enabled check box, and enter the IP address of the Host Address and click “APPLY”.

The screenshot shows the SMC Networks Advanced configuration interface. On the left is a sidebar menu with categories: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, and DDNS. Under the SYSTEM category, the following options are listed: Time Settings, Password Settings, Remote Management (which is selected), DNS, and a sub-menu icon. The main content area is titled "Remote Management" and contains the instruction: "Set the remote management of the router. If you want to manage the router from a remote location (outside of the local network), you must also specify the IP address of the remote PC." Below this instruction is a form with a "Host Address" field containing four input boxes, each with a "0" inside, and an "Enabled" checkbox which is checked. At the bottom right of the form are three buttons: "HELP", "SAVE SETTINGS", and "CANCEL".


Note: If you check Enable and specify an IP address of 0.0.0.0, any remote host can manage the Barricade.

For remote management via WAN IP address you need to connect using port 8080. Simply enter WAN IP address followed by :8080, for example, 211.20.16.1:8080.

The screenshot shows a web browser's address bar. The menu bar includes File, Edit, View, Favorites, Tools, and Help. Below the menu bar is a toolbar with icons for Back, Forward, Stop, Reload, Home, Search, and Favorites. The address bar itself is labeled "Address" and contains the text "211.20.16.1:8080".

DNS

Domain Name Servers (DNS) are used to map a domain name (e.g., www.smc.com) with the IP address (e.g., 64.147.25.20). Your ISP should provide the IP address of one or more Domain Name Servers. Enter those addresses on this page, and click “APPLY”.

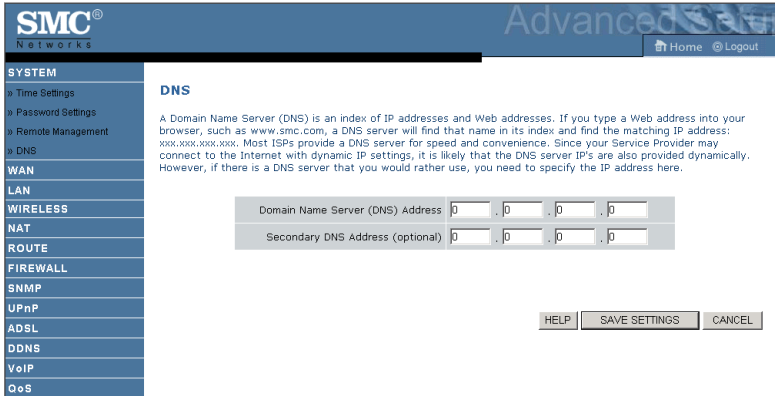

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with the following items: SYSTEM, Time Settings, Password Settings, Remote Management, DNS, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, and QoS. The 'DNS' item is selected. The main content area is titled 'DNS' and contains a descriptive paragraph about DNS servers. Below the text are two input fields for IP addresses, each with four sub-fields separated by dots. The first field is labeled 'Domain Name Server (DNS) Address' and the second is labeled 'Secondary DNS Address (optional)'. At the bottom right of the main area are three buttons: 'HELP', 'SAVE SETTINGS', and 'CANCEL'.

SMC® Networks Advanced Setup [Home](#) [Logout](#)

SYSTEM

- » Time Settings
- » Password Settings
- » Remote Management
- » **DNS**
- » WAN
- » LAN
- » WIRELESS
- » NAT
- » ROUTE
- » FIREWALL
- » SNMP
- » UPnP
- » ADSL
- » DDNS
- » VoIP
- » QoS

DNS

A Domain Name Server (DNS) is an index of IP addresses and Web addresses. If you type a Web address into your browser, such as www.smc.com, a DNS server will find that name in its index and find the matching IP address: xxx.xxx.xxx.xxx. Most ISPs provide a DNS server for speed and convenience. Since your Service Provider may connect to the Internet with dynamic IP settings, it is likely that the DNS server IP's are also provided dynamically. However, if there is a DNS server that you would rather use, you need to specify the IP address here.

Domain Name Server (DNS) Address: . . .

Secondary DNS Address (optional): . . .


[HELP](#) [SAVE SETTINGS](#) [CANCEL](#)

WAN

Specify the WAN connection parameters provided by your Internet Service Provider (ISP).

The Barricade can be connected to your ISP in one of the following ways:

- ATM PVC
- Clone MAC

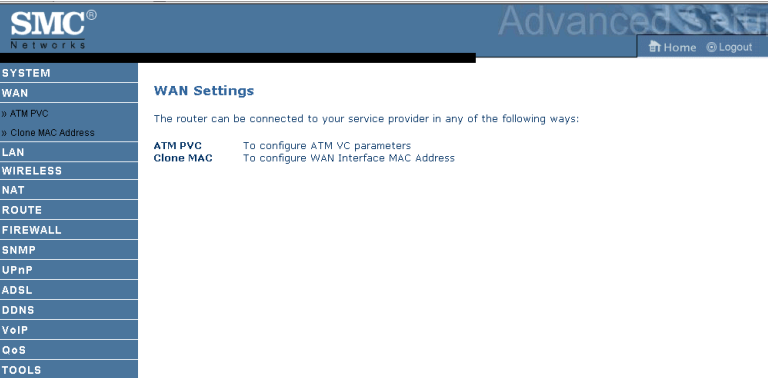

ATM PVC

Enter the ATM (Asynchronous Transfer Mode) virtual connection parameters here.

The screenshot shows the SMC Networks Advanced Setup web interface. The left sidebar contains a menu with the following items: SYSTEM, WAN, ATM PVC (selected), Clone MAC Address, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The main content area is titled "ATM PVC" and contains the following text: "ADSL router uses ATM as its layer 2 protocol. ATM PVC is a virtual connection which acts as a WAN interface. The Gateway supports up to 8 ATM PVCs." Below this text is a table with 4 columns: Description, VPI/VCI, Encapsulation, and Protocol. The table lists 8 virtual circuits (VC1 through VC8). Each VC has a link icon next to its description. The VPI/VCI column shows "--/-" for all VCs. The Encapsulation column shows "---" for all VCs. The Protocol column shows "---" for all VCs. A "HELP" button is located at the bottom right of the table.

Description	VPI/VCI	Encapsulation	Protocol
VC1	--/-	---	---
VC2	--/-	---	---
VC3	--/-	---	---
VC4	--/-	---	---
VC5	--/-	---	---
VC6	--/-	---	---
VC7	--/-	---	---
VC8	--/-	---	---

Parameter	Description
Description	Click on the VC to set the values for the connection.
VPI/VCI	Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI).
Encapsulation	Specifies how to handle multiple protocols at the ATM transport layer. <ul style="list-style-type: none"> VC-MUX: Point-to-Point Protocol over ATM Virtual Circuit Multiplexer (null encapsulation) allows only one protocol running per virtual circuit with less overhead. LLC: Point-to-Point Protocol over ATM Logical Link Control (LLC) allows multiple protocols running over one virtual circuit (using slightly more overhead).
Protocol	Protocol used for the connection.

ATM Interface

1483 Bridging

Enter the Bridging settings provided by your ISP.

ATM Interface

	ATM1	
Protocol	1483 Bridging	
VPI/VCI	8	35
Encapsulation	VC MUX	
QoS Class	UBR	
PCR/SCR/MBS	4000	4000 10

Parameter	Description
VPI/VCI	Data flows are broken up into fixed length cells, each of which contains a Virtual Path Identifier (VPI) that identifies the path between two nodes, and a Virtual Circuit Identifier (VCI) that identifies the data channel within that virtual path. Each virtual circuit maintains a constant flow of cells between the two end points. When there is no data to transmit, empty cells are sent. When data needs to be transmitted, it is immediately inserted into the cell flows.
Encapsulation	Shows the packet encapsulation type. Packet encapsulation specifies how to handle multiple protocols at the ATM transport layer. <ul style="list-style-type: none">VC-MUX: Point-to-Point Protocol over ATM VirtualCircuit Multiplexer (null encapsulation) allows only one protocol running per virtual circuit with less overhead.LLC: Point-to-Point Protocol over ATM Logical Link Control allows multiple protocols running over one virtual circuit (using slightly more overhead).
QoS Class	ATM QoS classes including CBR, UBR and VBR
PCR/SCR/MBS	QoS Parameters - PCR (Peak Cell Rate), SCR (Sustainable Cell Rate) and MBS (Maximum Burst Size) are configurable.

PPP0A

ATM Interface

ATM1	
Protocol	PPPoA
VPI/VCI	8 / 35
Encapsulation	VC MUX
QoS Class	UBR
PCR/SCR/MBS	4000 / 4000 / 10
IP assigned by ISP	Yes
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Connect Type	Auto - Triggered by traffic
Idle Time (Minute)	20
Username	
Password	
Confirm Password	
MTU	1500

Parameter	Description
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.
QoS Class	ATM QoS classes including CBR, UBR and VBR
PCR/SCR/MBS	QoS Parameters - PCR, SCR and MBS are configurable.
IP assigned by ISP	Select Yes if the IP address was provided by your ISP
IP Address	Enter the IP address provided by your ISP.
Subnet Mask	Enter the subnet mask address provided by your ISP.
Connect Type	Sets connection mode to always connected, automatic or manual connection.
Idle Time (Minute)	Enter the maximum idle time for the Internet connection. After this time has been exceeded the connection will be terminated.
Username	Enter user name.
Password	Enter password.
Confirm Password	Confirm password
MTU	Leave the Maximum Transmission Unit (MTU) at the default value (1500) unless you have a particular reason to change it.

1483 Routing

ATM Interface

	ATM1
Protocol	1483 Routing
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Default Gateway	0.0.0.0
VPI/VCI	8 / 35
Encapsulation	VC MUX
QoS Class	UBR
PCR/SCR/MBS	4000 / 4000 / 10
DHCP Client	<input type="checkbox"/>

Parameter	Description
IP Address	Enter the IP address provided by your ISP.
Subnet Mask	Enter the subnet mask address provided by your ISP.
Default Gateway	Enter the gateway address provided by your ISP.
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.
QoS Class	ATM QoS classes including CBR, UBR and VBR
PCR/SCR/MBS	QoS Parameters - PCR, SCR and MBS are configurable.
DHCP Client	Assigning an IP address dynamically

PPPoE

ATM Interface

ATM1	
Protocol	PPPoE ▾
IP Address	0.0.0.0
Subnet Mask	0.0.0.0
VPI/VCI	8 / 35
Encapsulation	VC MUX ▾
QoS Class	UBR ▾
PCR/SCR/MBS	4000 / 4000 / 10
Connect Type	Auto - Triggered by traffic ▾
Idle Time (Minute)	20
Username	
Password	
Confirm Password	
MTU	1492

Parameter	Description
IP Address	Enter the IP address provided by your ISP.
Subnet Mask	Enter the subnet mask address provided by your ISP.
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.
QoS Class	ATM QoS classes including CBR, UBR and VBR
PCR/SCR/MBS	QoS Parameters - PCR, SCR and MBS are configurable.
Connect Type	Sets connection mode to always connected, automatic or manual connection.
Idle Time (Minute)	Enter the maximum idle time for the Internet connection. After this time has been exceeded the connection will be terminated.
Username	Enter user name.
Password	Enter password.
Confirm Password	Confirm password
MTU	Leave the Maximum Transmission Unit (MTU) at the default value (1500) unless you have a particular reason to change it.

MAC Encapsulated Routing

ATM Interface

ATM1	
Protocol	MAC Encapsulated Routing ▾
IP Address	<input type="text" value="0.0.0.0"/>
Subnet Mask	<input type="text" value="0.0.0.0"/>
Default Gateway	<input type="text" value="0.0.0.0"/>
VPI/VCI	<input type="text" value="8"/> / <input type="text" value="35"/>
Encapsulation	VC MUX ▾
QoS Class	UBR ▾
PCR/SCR/MBS	<input type="text" value="4000"/> / <input type="text" value="4000"/> / <input type="text" value="10"/>
DHCP Client	<input type="checkbox"/>

Parameter	Description
IP Address	Enter the IP address provided by your ISP.
Subnet Mask	Enter the subnet mask address provided by your ISP.
Default Gateway	Enter the gateway address provided by your ISP.
VPI/VCI	Enter the Virtual Path Identifier (VPI) and Virtual Circuit Identifier (VCI) supplied by your ISP.
Encapsulation	Select the encapsulation used by ISP from the drop down list.
QoS Class	ATM QoS classes including CBR, UBR and VBR
PCR/SCR/MBS	QoS Parameters - PCR, SCR and MBS are configurable.
DHCP Client	Assigning an IP address dynamically

Clone MAC Address

Some ISPs require you to register your MAC address with them. If this is the case, the MAC address of the Barricade must be changed to the MAC address that you have registered with your ISP.

The screenshot shows the SMC Networks Advanced Setup web interface. On the left is a vertical navigation menu with the following items: SYSTEM, WAN, ATM PVC, Clone MAC Address (highlighted), LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The main content area is titled "Clone MAC Address" and contains the following text: "Some ISPs require you to register your MAC address with them. If you have done this, the MAC address of the Gateway must be changed to the MAC address that you supplied to your ISP." Below this text, under the heading "WAN Interface MAC Address:", there are three radio button options:

- ☒ Use the Gateway's default MAC address **00:06:4E:00:00:02**
- ☐ Use this PC's MAC address **00:10:B5:52:A9:69**
- ☐ Enter a new MAC address manually:

 The "Enter a new MAC address manually:" option is followed by six input fields for hexadecimal digits, with the first four containing "00", "10", "B5", and "52", and the last two being empty. At the bottom right of the form are three buttons: "HELP", "SAVE SETTINGS", and "CANCEL".

LAN

Use the LAN menu to configure the LAN IP address and to enable the DHCP server for dynamic client address allocation.

SMC®
Networks

Advanced

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

LAN Settings

You can enable DHCP to dynamically allocate IP addresses to your client PCs, or configure filtering functions based on specific clients or protocols. The router must have an IP address for the local network.

LAN IP

IP Address19216821

IP Subnet Mask255.255.255.0

DHCP Server☒ Enabled ☐ Disabled

Lease TimeTwo Days

IP Address Pool

Start IP19216822

End IP1921682254

Domain Name

Parameter	Description
LAN IP	
IP Address	The IP address of the Barricade.
IP Subnet Mask	The subnet mask of the network.
DHCP Server	The Barricade comes with the DHCP function. To dynamically assign an IP address to client PCs, enable this function.
Lease Time	Set the IP lease time. For home networks this may be set to Forever, which means there is no time limit on the IP address lease.
IP Address Pool	
Start IP Address	Specify the start IP address of the DHCP pool. Do not include the gateway address of the Barricade in the client address pool. If you change the pool range, make sure the first three octets match the gateway's IP address, i.e., 192.168.2.xxx.
End IP Address	Specify the end IP address of the DHCP pool.
Domain Name	If your network uses a domain name, enter it here. Otherwise, leave this field blank.


WIRELESS

The Barricade also operates as a wireless access point, allowing wireless computers to communicate with each other. To configure this function, all you need to do is enable the wireless function, define the radio channel, the domain identifier, and the security options. Check Enable and click “SAVE SETTINGS”.

The screenshot shows the SMC Networks Advanced Setup web interface. On the left is a navigation menu with the following items: SYSTEM, WAN, LAN, WIRELESS (highlighted), Channel and SSID, Access Control, Security, WEP, WPA, 802.1X, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The main content area is titled "Wireless Settings". Below the title, a descriptive text states: "The gateway can be quickly configured as an wireless access point for roaming clients by setting the service set identifier (SSID) and channel number. It also supports data encryption and client filtering." Below this text, there is a label "Enable or disable Wireless module function :" followed by two radio buttons: "Enable" (which is selected) and "Disable". In the bottom right corner of the main content area, there is a button labeled "SAVE SETTINGS".

Channel and SSID

You must specify a common radio channel and SSID (Service Set ID) to be used by the Barricade and all of its wireless clients. Be sure you configure all of its clients to the same values.

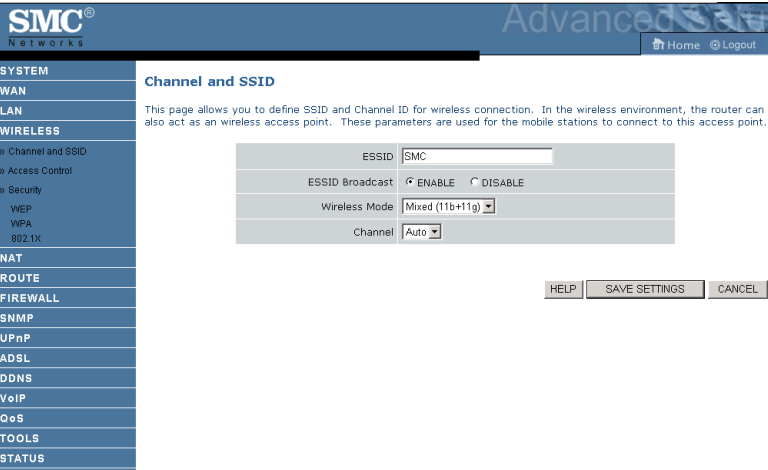

Parameter	Description
ESSID	Extended Service Set ID. The ESSID must be the same on the Barricade and all of its wireless clients.
ESSID Broadcast	Enable or disable the broadcasting of the SSID.
Wireless Mode	This device supports both 11g and 11b wireless networks. Make your selection depending on the type of wireless network that you have.
Channel	<p>The radio channel used by the wireless router and its clients to communicate with each other. This channel must be the same on the Barricade and all of its wireless clients.</p> <p>The Barricade will automatically assign itself a radio channel, or you may select one manually.</p>

Access Control

restrict access based on MAC address

SMC[®]
Networks

Advanced Setup

Home Logout

SYSTEM
WAN
LAN
WIRELESS
Channel and SSID
Access Control
Security
WEP
WPA
802.1X
NAT
ROUTE
FIREWALL
SNMP
UPnP
ADSL
DDNS
VoIP
QoS
TOOLS
STATUS

WLAN MAC Filtering Table


For a more secure Wireless network you can specify that only certain Wireless PCs can connect to the Access Point. Up to 32 MAC addresses can be added to the MAC Filtering Table. When enabled, all registered MAC addresses are controlled by the Access Rule.

- Enable MAC Filtering : ☐ Yes ☒ No
- Access Rule for registered MAC address : ☐ Allow ☒ Deny
- MAC Filtering Table (up to 32 stations)

ID	MAC Address								
1	00	:	00	:	00	:	00	:	00
2	00	:	00	:	00	:	00	:	00
3	00	:	00	:	00	:	00	:	00
4	00	:	00	:	00	:	00	:	00
5	00	:	00	:	00	:	00	:	00
6	00	:	00	:	00	:	00	:	00
7	00	:	00	:	00	:	00	:	00
8	00	:	00	:	00	:	00	:	00
9	00	:	00	:	00	:	00	:	00
10	00	:	00	:	00	:	00	:	00
11	00	:	00	:	00	:	00	:	00

Security

To make your wireless network safe, you should turn on the security function. The Barricade supports WEP (Wired Equivalent Privacy) and WPA (Wi-Fi Protected) security mechanisms.

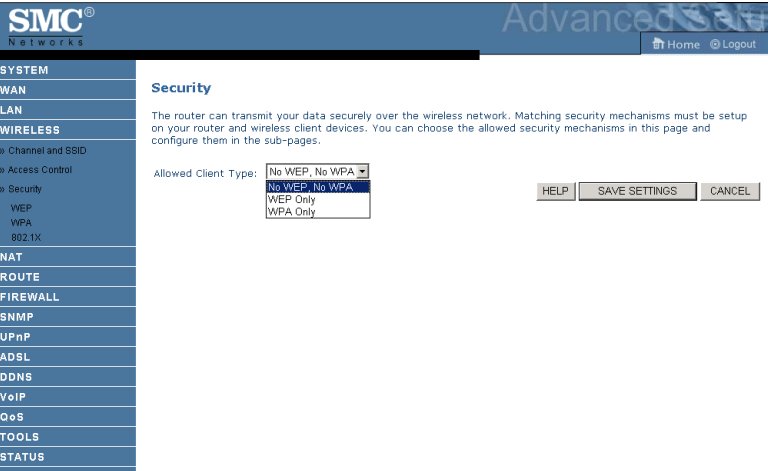

WEP

If you want to use WEP to protect your wireless network, you need to set the same parameters for the Barricade and all your wireless clients.

Parameter	Description
WEP Mode	Select 64 bit or 128 bit key to use for encryption.
Key Entry Method	Select Hex or ASCII to use for encryption key
Key Provisioning	Select Static if there is only one fixed key for encryption. If you want to select Dynamic, you would need to enable 802.1X function first.

You may automatically generate encryption keys or manually enter the keys. To generate the key automatically with passphrase, check the Passphrase box, enter a string of characters. Select the default key from the drop down menu. Click “SAVE SETTINGS”.


Note: The passphrase can consist of up to 32 alphanumeric characters.

To manually configure the encryption key, enter five hexadecimal pairs of digits for each 64-bit key, or enter 13 pairs for the single 128-bit key. (A hexadecimal digit is a number or letter in the range 0-9 or A-F)

Note that WEP protects data transmitted between wireless nodes, but does not protect any transmissions over your wired network or over the Internet.

WPA

Wi-Fi Protected Access (WPA) combines temporal key integrity protocol (TKIP) and 802.1X mechanisms. It provides dynamic key encryption and 802.1X authentication service.

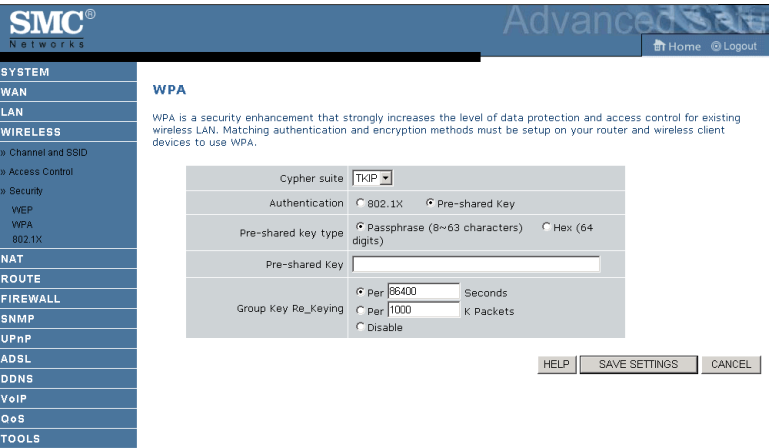

Parameter	Description
Cypher suite	The security mechanism used in WPA for encryption.
Authentication	Choose 802.1X or Pre-shared Key to use as the authentication method. <ul style="list-style-type: none">•802.1X: for the enterprise network with a RADIUS server.•Pre-shared key: for the SOHO network environment without an authentication server.
Pre-shared key type	Select the key type to be used in the Pre-shared Key.

Parameter	Description
Pre-shared Key	Type in the key here.
Group Key Re_Keying	The period of renewing broadcast/multicast key.

802.1X

If 802.1X is used in your network, then you should enable this function for the Barricade.

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: SYSTEM, WAN, LAN, WIRELESS (selected), Channel and SSID, Access Control, Security, WEP, WPA, 802.1X, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The main content area is titled '802.1X' and contains the following configuration options:

- 802.1X Authentication:** Radio buttons for 'Enable' and 'Disable'.
- Session Idle Timeout:** A text box with '300' and the label 'Seconds (0 for no timeout checking)'.
- Re-Authentication Period:** A text box with '3600' and the label 'Seconds (0 for no re-authentication)'.
- Quiet Period:** A text box with '60' and the label 'Seconds after authentication failed'.
- Server Type:** A dropdown menu with 'RADIUS' selected.

Below these is the 'RADIUS Server Parameters' section with the following fields:

- Server IP:** A dotted IP address field with '192', '168', '2', and '1' entered.
- Server Port:** A text box with '1812' entered.
- Secret Key:** An empty text box.
- NAS-ID:** An empty text box.

At the bottom right of the form are three buttons: 'HELP', 'SAVE SETTINGS', and 'CANCEL'.

Parameter	Description
802.1X Authentication	Enable or disable this authentication function.
Session Idle timeout	Defines a maximum period of time for which the connection is maintained during inactivity.
Re-Authentication Period	Defines a maximum period of time for which the authentication server will dynamically re-assign a session key to a connected client.

Parameter	Description
Quiet Period	Defines a maximum period of time for which the Barricade will wait between failed authentications.
Server Type	Select TINY or RADIUS as the authentication server.
RADIUS Server Parameters	
Server IP	The IP address of your authentication server.
Server Port	The port used for the authentication service.
Secret Key	The secret key shared between the authentication server and its clients.
NAS-ID	Defines the request identifier of the Network Access Server.

NAT

Network Address Translation allows multiple users to access the Internet sharing one public IP.

The screenshot displays the SMC Networks Advanced Setup web interface. The top header features the SMC Networks logo and the text "Advanced Setup". Navigation links for "Home" and "Logout" are visible. A left sidebar contains a menu with the following items: SYSTEM, WAN, LAN, WIRELESS, NAT, Address Mapping, Virtual Server, Special Application, NAT Mapping Table, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The main content area is titled "NAT Settings" and includes a descriptive paragraph: "Network Address Translation (NAT) allows multiple users at your local site to access the Internet through a single public IP address or multiple public IP addresses. NAT can also prevent hacker attacks by mapping local addresses to public addresses for key services such as the Web or FTP." Below this text, there is a control for "Enable or disable NAT module function" with radio buttons for "Enable" (selected) and "Disable". A "SAVE SETTINGS" button is located at the bottom right of the settings area.

Address Mapping


Allows one or more public IP addresses to be shared by multiple internal users. This also hides the internal network for increased privacy and security. Enter the Public IP address you wish to share into the Global IP field. Enter a range of internal IPs that will share the global IP into the “from” field.

The screenshot shows the SMC Networks Advanced Router configuration interface. On the left is a navigation menu with categories: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The NAT section is expanded, showing sub-items: Address Mapping (selected), Virtual Server, Special Application, and NAT Mapping Table. The main content area is titled 'Address Mapping' and contains a descriptive paragraph about Network Address Translation (NAT). Below the text is a table with 7 rows, each for a global IP mapping. Each row includes a 'Global IP' field, a description 'is transformed as multiple virtual IPs', and a 'from' field with a range of internal IPs (e.g., 192.168.2.0 to 192.168.2.0).

Address Mapping		
1. Global IP:	0 . 0 . 0 . 0	is transformed as multiple virtual IPs from 192.168.2.0 to 192.168.2.0
2. Global IP:	0 . 0 . 0 . 0	is transformed as multiple virtual IPs from 192.168.2.0 to 192.168.2.0
3. Global IP:	0 . 0 . 0 . 0	is transformed as multiple virtual IPs from 192.168.2.0 to 192.168.2.0
4. Global IP:	0 . 0 . 0 . 0	is transformed as multiple virtual IPs from 192.168.2.0 to 192.168.2.0
5. Global IP:	0 . 0 . 0 . 0	is transformed as multiple virtual IPs from 192.168.2.0 to 192.168.2.0
6. Global IP:	0 . 0 . 0 . 0	is transformed as multiple virtual IPs from 192.168.2.0 to 192.168.2.0
7. Global IP:	0 . 0 . 0 . 0	is transformed as multiple virtual IPs

Virtual Server

If you configure the Barricade as a virtual server, remote users accessing services such as web or FTP at your local site via public IP addresses can be automatically redirected to local servers configured with private IP addresses. In other words, depending on the requested service (TCP/UDP port number), the Barricade redirects the external service request to the appropriate server (located at another internal IP address).

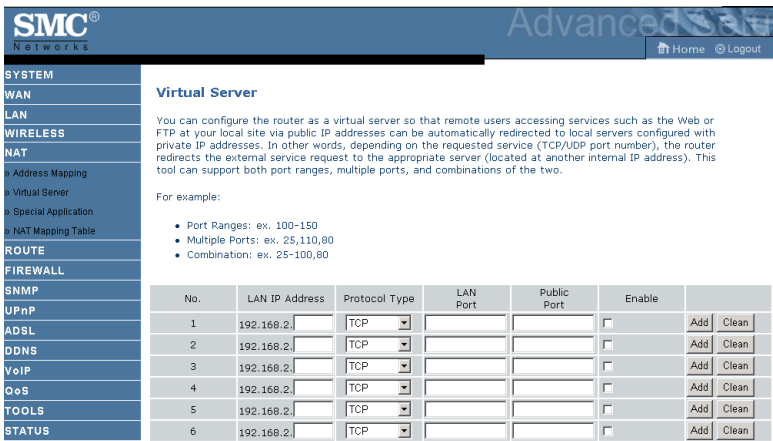

The screenshot shows the SMC Networks Advanced Setup interface. The left sidebar contains a navigation menu with options: SYSTEM, WAN, LAN, WIRELESS, NAT (selected), ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The main content area is titled "Virtual Server" and includes a description: "You can configure the router as a virtual server so that remote users accessing services such as the Web or FTP at your local site via public IP addresses can be automatically redirected to local servers configured with private IP addresses. In other words, depending on the requested service (TCP/UDP port number), the router redirects the external service request to the appropriate server (located at another internal IP address). This tool can support both port ranges, multiple ports, and combinations of the two." Below this is a "For example:" section with a bulleted list: "Port Ranges: ex. 100-150", "Multiple Ports: ex. 25,110,80", and "Combination: ex. 25-100,80". At the bottom is a table for configuring virtual servers.

No.	LAN IP Address	Protocol Type	LAN Port	Public Port	Enable	Add	Clean
1	192.168.2.1	TCP			<input type="checkbox"/>	Add	Clean
2	192.168.2.1	TCP			<input type="checkbox"/>	Add	Clean
3	192.168.2.1	TCP			<input type="checkbox"/>	Add	Clean
4	192.168.2.1	TCP			<input type="checkbox"/>	Add	Clean
5	192.168.2.1	TCP			<input type="checkbox"/>	Add	Clean
6	192.168.2.1	TCP			<input type="checkbox"/>	Add	Clean

For example, if you set Type/Public Port to TCP/80 (HTTP or web) and the Private IP/Port to 192.168.2.2/80, then all HTTP requests from outside users will be transferred to 192.168.2.2 on port 80. Therefore, by just entering the IP address provided by the ISP, Internet users can access the service they need at the local address to which you redirect them.

The more common TCP service ports include:
HTTP: 80, FTP: 21, Telnet: 23, and POP3: 110.

A list of ports is maintained at the following link:
<http://www.iana.org/assignments/port-numbers>.

Special Application

Some applications require multiple connections, such as Internet gaming, video-conferencing, and Internet telephony. These applications may not work when Network Address Translation (NAT) is enabled. If you need to run applications that require multiple connections, use these pages to specify the additional public ports to be opened for each application.

SMC®
Networks

Advanced

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

» Address Mapping

» Virtual Server

» Special Application

» NAT Mapping Table

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

Special Applications

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications cannot work when Network Address Translation (NAT) is enabled. If you need to run applications that require multiple connections, specify the port normally associated with an application in the "Trigger Port" field, select the protocol type as TCP or UDP, then enter the public ports associated with the trigger port to open them for inbound traffic.
Note: The range of the Trigger Ports is from 1 to 65535.

	Trigger Port	Trigger Type	Public Port	Public Type	Enabled
1.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
2.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
3.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
4.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
5.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
6.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
7.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
8.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
9.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>

9.

☒ TCP
☐ UDP

select one -
Battle.net
Diigo
Gmail
MSN Gaming Zone
PC-to-Phone
Quick Time 4

10.

☒ TCP
☐ UDP

Popular applications

select one -

COPY TO

1

NAT Mapping Table

This page displays the current NAPT (Network Address Port Translation) address mappings.

The screenshot shows the SMC Networks Advanced Setup web interface. On the left is a navigation menu with the following items: SYSTEM, WAN, LAN, WIRELESS, NAT, Address Mapping, Virtual Server, Special Application, NAT Mapping Table, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The NAT Mapping Table item is selected. The main content area has a title 'NAT Mapping Table' and a description: 'NAT Mapping Table displays the current NAPT address mappings.' Below this is a table with the following headers: Index, Protocol, Local IP, Local Port, Pseudo IP, Pseudo Port, Peer IP, and Peer Port. There is a 'Refresh' button below the table and a 'HELP' button on the right. The top of the page features the SMC Networks logo and 'Advanced Setup' text, along with 'Home' and 'Logout' links.

Index	Protocol	Local IP	Local Port	Pseudo IP	Pseudo Port	Peer IP	Peer Port
<div>Refresh</div> <div>HELP</div>							

ROUTING

These pages define routing related parameters, including static routes and RIP (Routing Information Protocol) parameters.

Static Route

SMC®
Networks

Advanced Settings

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

Static Route

RIP

Routing Table

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

Static Route Parameter

Please Enter the Following Configuration Parameters:

Index

Network Address

Subnet Mask

Gateway

Configure

No Valid Static Route Entry !!!

Add

HELP

SAVE SETTINGS

Cancel

Parameter	Description
Index	Check the box of the route you wish to delete or modify.
Network Address	Enter the IP address of the remote computer for which to set a static route.
Subnet Mask	Enter the subnet mask of the remote network for which to set a static route.
Gateway	Enter the WAN IP address of the gateway to the remote network.

Click “Add” to add a new static route to the list, or check the box of an already entered route and click “Modify”. Clicking “Delete” will remove an entry from the list.

RIP

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, Static Route, RIP, Routing Table, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The 'RIP' option is selected. The main area is titled 'RIP Parameter' and contains the following configuration options:

- General RIP parameter:**
 - RIP mode: ☒ Disable ☐ Enable
 - Auto summary: ☒ Disable ☐ Enable
- Table of current interface RIP parameter:**

Interface	Operation Mode	Version	Poison Reverse	Authentication Required	Authentication Code
LAN	Disable	1	Disable	None	
WLAN	Disable	1	Disable	None	
ATM1	Disable	1	Disable	None	
ATM2	Disable	1	Disable	None	
ATM3	Disable	1	Disable	None	
ATM4	Disable	1	Disable	None	
ATM5	Disable	1	Disable	None	
ATM6	Disable	1	Disable	None	
ATM7	Disable	1	Disable	None	
ATM8	Disable	1	Disable	None	
PPPoE1	Disable	1	Disable	None	
PPPoE2	Disable	1	Disable	None	

Parameter	Description
-----------	-------------

General RIP Parameters

RIP mode	Globally enables or disables RIP.
Auto summary	If Auto summary is disabled, then RIP packets will include sub-network information from all sub-networks connected to the router. If enabled, this sub-network information will be summarized to one piece of information covering all sub-networks.

Table of current Interface RIP parameter

Interface	The WAN interface to be configured.
Operation Mode	Disable: RIP disabled on this interface. Enable: RIP enabled on this interface. Silent: Listens for route broadcasts and updates its route table. It does not participate in sending route broadcasts.
Version	Sets the RIP (Routing Information Protocol) version to use on this interface.

Parameter	Description
Poison Reverse	A method for preventing loops that would cause endless retransmission of data traffic.
Authentication Required	<ul style="list-style-type: none">• None: No authentication.• Password: A password authentication key is included in the packet. If this does not match what is expected, the packet will be discarded. This method provides very little security as it is possible to learn the authentication key by watching RIP packets.• MD5: An algorithm that is used to verify data integrity through the creation of a 128-bit message digest from data input (which may be a message of any length) that is claimed to be as unique to that specific data as a fingerprint is to a specific individual.
Authentication Code	Password or MD5 Authentication key.

RIP sends routing-update messages at regular intervals and when the network topology changes. When a router receives a routing update that includes changes to an entry, it updates its routing table to reflect the new route. RIP routers maintain only the best route to a destination. After updating its routing table, the router immediately begins transmitting routing updates to inform other network routers of the change.

Routing Table

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE (selected), Static Route, RIP, Routing Table, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The main content area is titled 'Routing Table' and includes a 'List Routing Table:' section. It displays a table with columns: Flags, Network Address, Netmask, Gateway, Interface, and Metric. The table contains two entries: one for 192.168.2.0 with a netmask of 255.255.255.0, gateway 'directly', interface 'LAN', and metric '---'; and another for 127.0.0.1 with a netmask of 255.255.255.255, gateway 'directly', interface 'Loopback', and metric '---'. Below the table, a legend states: 'Flags : C - directly connected, S - static, R - RIP, I - ICMP Redirect'. A 'HELP' button is located at the bottom right of the table area.

Flags	Network Address	Netmask	Gateway	Interface	Metric
C	192.168.2.0	255.255.255.0	directly	LAN	---
C	127.0.0.1	255.255.255.255	directly	Loopback	---

Flags : C - directly connected, S - static, R - RIP, I - ICMP Redirect

Parameter Description

Flags	<p>Indicates the route status:</p> <p>C = Direct connection on the same subnet.</p> <p>S = Static route.</p> <p>R = RIP (Routing Information Protocol) assigned route.</p> <p>I = ICMP (Internet Control Message Protocol) Redirect route.</p>
Network Address	Destination IP address.
Netmask	<p>The subnetwork associated with the destination.</p> <p>This is a template that identifies the address bits in the destination address used for routing to specific subnets. Each bit that corresponds to a “1” is part of the subnet mask number; each bit that corresponds to “0” is part of the host number.</p>
Gateway	The IP address of the router at the next hop to which frames are forwarded.
Interface	The local interface through which the next hop of this route is reached.
Metric	When a router receives a routing update that contains a new or changed destination network entry, the router adds 1 to the metric value indicated in the update and enters the network in the routing table.

FIREWALL

The Barricade Router's firewall inspects packets at the application layer, maintains TCP and UDP session information including time-outs and the number of active sessions, and provides the ability to detect and prevent certain types of network attacks.

Network attacks that deny access to a network device are called Denial-of-Service (DoS) attacks. DoS attacks are aimed at devices and networks with a connection to the Internet. Their goal is not to steal information, but to disable a device or network so users no longer have access to network resources.



The Barricade protects against the following DoS attacks: IP Spoofing, Land Attack, Ping of Death, IP with zero length, Smurf Attack, UDP port loopback, Snork Attack, TCP null scan, and TCP SYN flooding. (For details see page 4-55.)

The firewall does not significantly affect system performance, so we advise leaving it enabled to protect your network. Select Enable and click the "SAVE SETTINGS" button to open the Firewall submenus.

Access Control

Access Control allows users to define the outgoing traffic permitted or not-permitted through the WAN interface. The default is to permit all outgoing traffic.

SMC® Networks Advanced Setup

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

» Access Control

» MAC Filter

» URL Blocking

» Schedule Rule

» Intrusion Detection

» DMZ

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

Access Control

Access Control allows users to define the traffic type permitted or not-permitted to WAN port service. This page includes IP address filtering and MAC address filtering.

• Enable Filtering Function : ☒ Yes ☐ No

• Normal Filtering Table (up to 10 computers)

Client PC Description	Client PC IP Address	Client Service	Schedule Rule	Configure
No Valid Filtering Rule !!!				

[Add PC](#)

HELP SAVE SETTINGS CANCEL

The following items are on the Access Control screen:

Parameter	Description
Enable Filtering Function	Click Yes to turn on the filtering function.
Normal Filtering Table	Displays the IP address (or an IP address range) filtering table.

To add the PC to the filtering table:

1. Click “Add PC” on the Access Control screen.
2. Define the appropriate settings for client PC services.
3. Click “OK” and then click “SAVE SETTINGS” to save your settings.

SMC®
Networks

Advanced

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

» Access Control

» MAC Filter

» URL Blocking

» Schedule Rule

» Intrusion Detection

» DMZ

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

Access Control Add PC

This page allows users to define service limitations of client PCs, including IP address, service type and scheduling rule criteria. For the URL blocking function, you need to configure the URL address first on the "URL Blocking Site" page. For the scheduling function, you also need to configure the schedule rule first on the "Schedule Rule" page.

- Client PC Description:
- Client PC IP Address: 192.168.2. ~
- Client PC Service:

Service Name	Detail Description	Blocking
WWW	HTTP, TCP Port 80, 3128, 8000, 8001, 8080	<input type="checkbox"/>
WWW with URL Blocking	HTTP (Ref. URL Blocking Site Page)	<input type="checkbox"/>
E-mail Sending	SMTP, TCP Port 25	<input type="checkbox"/>
News Forums	NNTP, TCP Port 119	<input type="checkbox"/>
E-mail Receiving	POP3, TCP Port 110	<input type="checkbox"/>
Secure HTTP	HTTPS, TCP Port 443	<input type="checkbox"/>
File Transfer	FTP, TCP Port 21	<input type="checkbox"/>
Telnet Service	TCP Port 23	<input type="checkbox"/>
AIM	AOL Instant Messenger, TCP Port 5190	<input type="checkbox"/>
NetMeeting	H.323, TCP Port 1720, 1503	<input type="checkbox"/>
DNS	UDP Port 53	<input type="checkbox"/>
SNMP	UDP Port 161, 162	<input type="checkbox"/>
VPN-PPTP	TCP Port 1723	<input type="checkbox"/>
VPN-L2TP	UDP Port 1701	<input type="checkbox"/>
TCP	All TCP Port	<input type="checkbox"/>
UDP	All UDP Port	<input type="checkbox"/>

MAC Filter

The Barricade can also limit the access of hosts within the local area network (LAN). The MAC Filtering Table allows the Barricade to enter up to 32 MAC addresses that are not allowed access to the WAN port.

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with categories: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, Access Control, MAC Filter, URL Blocking, Schedule Rule, Intrusion Detection, DMZ, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The 'MAC Filter' option is selected. The main content area is titled 'MAC Filtering Table'. It contains a description: 'This section helps provides MAC Filter configuration. When enabled, only MAC addresses configured will have access to your network. All other client devices will get denied access. This security feature can support up to 32 devices and applies to clients.' Below this are two radio buttons for 'MAC Address Control': 'Yes' (unselected) and 'No' (selected). Under the 'No' option, there is a sub-section 'MAC Filtering Table (up to 32 computers)' which contains a table with 15 rows and 2 columns: 'ID' and 'MAC Address'. Each row has input fields for the MAC address in the format XX:XX:XX:XX:XX:XX.

ID	MAC Address
1	XX:XX:XX:XX:XX:XX
2	XX:XX:XX:XX:XX:XX
3	XX:XX:XX:XX:XX:XX
4	XX:XX:XX:XX:XX:XX
5	XX:XX:XX:XX:XX:XX
6	XX:XX:XX:XX:XX:XX
7	XX:XX:XX:XX:XX:XX
8	XX:XX:XX:XX:XX:XX
9	XX:XX:XX:XX:XX:XX
10	XX:XX:XX:XX:XX:XX
11	XX:XX:XX:XX:XX:XX
12	XX:XX:XX:XX:XX:XX
13	XX:XX:XX:XX:XX:XX
14	XX:XX:XX:XX:XX:XX
15	XX:XX:XX:XX:XX:XX

Click Yes to enable, or No to disable this function.

Enter the MAC address in the space provided.

URL Blocking

The Barricade allows the user to block access to web sites by entering either a full URL address or just a keyword. This feature can be used to protect children from accessing violent or pornographic web sites.

SMC®
Networks

Advanced

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

» Access Control

» MAC Filter

» URL Blocking

» Schedule Rule

» Intrusion Detection

» DMZ

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

URL Blocking

Disallowed Web Sites and Keywords.

You can block access to certain Web sites from a particular PC by entering either a full URL address or just a keyword of the Web site.

To specify the particular PC, go back to the "Access Control" page and check the box for "Http with URL Blocking" in the "Normal Filtering Table".

Rule Number	URL / Keyword	Rule Number	URL / Keyword
Site 1		Site 16	
Site 2		Site 17	
Site 3		Site 18	
Site 4		Site 19	
Site 5		Site 20	
Site 6		Site 21	
Site 7		Site 22	
Site 8		Site 23	
Site 9		Site 24	
Site 10		Site 25	
Site 11		Site 26	
Site 12		Site 27	
Site 13		Site 28	
Site 14		Site 29	
Site 15		Site 30	

Clear All

You can define up to 30 sites here.

Schedule Rule

You may filter Internet access for local clients based on rules. Each access control rule may be activated at a scheduled time. Define the schedule on the Schedule Rule page, and apply the rule on the Access Control page.

SMC[®] Networks Advanced Setup [Home](#) [Logout](#)

SYSTEM
WAN
LAN
WIRELESS
NAT
ROUTE
FIREWALL
 » Access Control
 » MAC Filter
 » URL Blocking
 » Schedule Rule
 » Intrusion Detection
 » DMZ
SNMP
UPnP
ADSL
DDNS
VoIP
QoS
TOOLS
STATUS

Schedule Rule

This page defines schedule rule names and activates the schedule for use in the "Access Control" page.

- Schedule Rule Table (up to 10 rules)

Rule Name	Rule Comment	Configure
No Valid Schedule Rule !!!		

[Add Schedule Rule](#)

[HELP](#) [SAVE SETTINGS](#) [CANCEL](#)

Follow these steps to add a schedule rule:

SMC®
Networks

Advanced Settings

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

» Access Control

» MAC Filter

» URL Blocking

» Schedule Rule

» Intrusion Detection

» DMZ

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

Edit Schedule Rule

Name:

Comment:

Activate Time Period:

Week Day	Start Time (hh:mm)	End Time (hh:mm)
Every Day	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>
Sunday	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>
Monday	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>
Tuesday	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>
Wednesday	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>
Thursday	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>
Friday	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>
Saturday	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>

OK Cancel

1. Click “Add Schedule Rule”.
2. Define the appropriate settings for a schedule rule.
3. Click “OK” and then click “SAVE SETTINGS” to save your settings.


Intrusion Detection

- Intrusion Detection Feature**

Stateful Packet Inspection (SPI) and Anti-DoS firewall protection (Default: Enabled) — The Intrusion Detection Feature of the Barricade Router limits access for incoming traffic at the WAN port. When the SPI feature is turned on, all incoming packets will be blocked except for those types marked in the Stateful Packet Inspection section.

RIP Defect (Default: Enabled) — If an RIP request packet is not acknowledged to by the router, it will stay in the input queue and not be released. Accumulated packets could cause the input queue to fill, causing severe problems for all protocols. Enabling this feature prevents the packets from accumulating.

Discard Ping to WAN (Default: Disabled) — Prevent a ping on the Barricade's WAN port from being routed to the network.

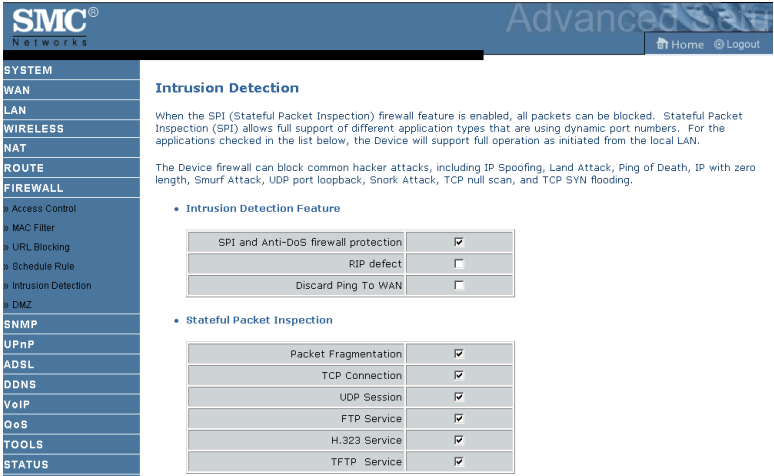

The screenshot shows the SMC Networks Advanced Setup interface. The left sidebar contains a navigation menu with the following items: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, Access Control, MAC Filter, URL Blocking, Schedule Rule, Intrusion Detection, DMZ, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The main content area is titled "Intrusion Detection" and includes the following text:

When the SPI (Stateful Packet Inspection) firewall feature is enabled, all packets can be blocked. Stateful Packet Inspection (SPI) allows full support of different application types that are using dynamic port numbers. For the applications checked in the list below, the Device will support full operation as initiated from the local LAN.

The Device firewall can block common hacker attacks, including IP Spoofing, Land Attack, Ping of Death, IP with zero length, Smurf Attack, UDP port loopback, Snork Attack, TCP null scan, and TCP SYN flooding.

Below the text, there are two sections for configuration:

- Intrusion Detection Feature**

SPI and Anti-DoS firewall protection	<input checked="" type="checkbox"/>
RIP defect	<input type="checkbox"/>
Discard Ping To WAN	<input type="checkbox"/>
- Stateful Packet Inspection**

Packet Fragmentation	<input checked="" type="checkbox"/>
TCP Connection	<input checked="" type="checkbox"/>
UDP Session	<input checked="" type="checkbox"/>
FTP Service	<input checked="" type="checkbox"/>
H.323 Service	<input checked="" type="checkbox"/>
TFTP Service	<input checked="" type="checkbox"/>

Scroll down to view more information.

CONFIGURING THE VOICE ADSL ROUTER

SMC[®]
Networks

Advanced

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

» Access Control

» MAC Filter

» URL Blocking

» Schedule Rule

» Intrusion Detection

» DMZ

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

» Access Control

» MAC Filter

» URL Blocking

» Schedule Rule

» Intrusion Detection

» DMZ

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

• When hackers attempt to enter your network, we can alert you by e-mail

Your E-mail Address :

SMTP Server Address :

POP3 Server Address :

User name :

Password :

• Connection Policy

Fragmentation half-open wait: secs

TCP SYN wait: sec.

TCP FIN wait: sec.

TCP connection idle timeout: sec.

UDP session idle timeout: sec.

H.323 data channel idle timeout: sec.

• DoS Detect Criteria:

Total incomplete TCP/UDP sessions HIGH: session

Total incomplete TCP/UDP sessions LOW: session

Incomplete TCP/UDP sessions (per min) HIGH: session

Incomplete TCP/UDP sessions (per min) LOW: session

Maximum incomplete TCP/UDP sessions number from same host:

Incomplete TCP/UDP sessions detect sensitive time period: msec.

Maximum half-open fragmentation packet number from same host:

Half-open fragmentation detect sensitive time period: msec.

Flooding cracker block time: sec.

HELP

SAVE SETTINGS

CANCEL

- **Stateful Packet Inspection**

This is called a “stateful” packet inspection because it examines the contents of the packet to determine the state of the communications; i.e., it ensures that the stated destination computer has previously requested the current communication. This is a way of ensuring that all communications are initiated by the recipient computer and are taking place only with sources that are known and trusted from previous interactions. In addition to being more rigorous in their inspection of packets, stateful inspection firewalls also close off ports until connection to the specific port is requested.

When particular types of traffic are checked, only the particular type of traffic initiated from the internal LAN will be allowed. For example, if the user only checks “FTP Service” in the Stateful Packet Inspection section, all incoming traffic will be blocked except for FTP connections initiated from the local LAN.

Stateful Packet Inspection allows you to select different application types that are using dynamic port numbers. If you wish to use the Stateful Packet Inspection (SPI) to block packets, click on the Yes radio button in the “Enable SPI and Anti-DoS firewall protection” field and then check the inspection type that you need, such as Packet Fragmentation, TCP Connection, UDP Session, FTP Service, H.323 Service, or TFTP Service.

- **When hackers attempt to enter your network, we can alert you by e-mail**

Enter your email address. Specify your SMTP and POP3 servers, user name, and password.

- **Connection Policy**

Enter the appropriate values for TCP/UDP sessions as described in the following table.

Parameter	Defaults	Description
Fragmentation half-open wait	10 sec	Configures the number of seconds that a packet state structure remains active. When the timeout value expires, the router drops the unassembled packet, freeing that structure for use by another packet.
TCP SYN wait	30 sec	Defines how long the software will wait for a TCP session to synchronize before dropping the session.
TCP FIN wait	5 sec	Specifies how long a TCP session will be maintained after the firewall detects a FIN packet.
TCP connection idle timeout	3600 seconds (1 hour)	The length of time for which a TCP session will be managed if there is no activity.
UDP session idle timeout	30 sec	The length of time for which a UDP session will be managed if there is no activity.
H.323 data channel idle timeout	180 sec	The length of time for which an H.323 session will be managed if there is no activity.

- **DoS Criteria and Port Scan Criteria**

Set up DoS and port scan criteria in the spaces provided (as shown below).

Parameter	Defaults	Description
Total incomplete TCP/UDP sessions HIGH	300 sessions	Defines the rate of new unestablished sessions that will cause the software to <i>start</i> deleting half-open sessions.
Total incomplete TCP/UDP sessions LOW	250 sessions	Defines the rate of new unestablished sessions that will cause the software to <i>stop</i> deleting half-open sessions.
Incomplete TCP/UDP sessions (per min) HIGH	250 sessions	Maximum number of allowed incomplete TCP/UDP sessions per minute.
Incomplete TCP/UDP sessions (per min) LOW	200 sessions	Minimum number of allowed incomplete TCP/UDP sessions per minute.
Maximum incomplete TCP/UDP sessions number from same host	10	Maximum number of incomplete TCP/UDP sessions from the same host.
Incomplete TCP/UDP sessions detect sensitive time period	300 msec	Length of time before an incomplete TCP/UDP session is detected as incomplete.
Maximum half-open fragmentation packet number from same host	30	Maximum number of half-open fragmentation packets from the same host.
Half-open fragmentation detect sensitive time period	10000 msec	Length of time before a half-open fragmentation session is detected as half-open.
Flooding cracker block time	300 second	Length of time from detecting a flood attack to blocking the attack.

Note: The firewall does not significantly affect system performance, so we advise enabling the prevention features to protect your network.

DMZ

If you have a client PC that cannot run an Internet application properly from behind the firewall, you can open the client up to unrestricted two-way Internet access. Enter the IP address of a DMZ (Demilitarized Zone) host on this screen. Adding a client to the DMZ may expose your local network to a variety of security risks, so only use this option as a last resort.

SMC®
Networks

Advanced

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

» Access Control

» MAC Filter

» URL Blocking

» Schedule Rule

» Intrusion Detection

» DMZ

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

DMZ(Demilitarized Zone)

If you have a local client PC that cannot run an Internet application properly from behind the NAT firewall, then you can open the client up to unrestricted two-way Internet access by defining a Virtual DMZ Host.

Enable DMZ: ☐ Yes ☒ No

Multiple PCs can be exposed to the Internet for two-way communications e.g. Internet gaming, video conferencing, or VPN connections. To use the DMZ, you must set a static IP address for that PC.

Public IP Address

Client PC IP Address

1. 0.0.0.0

192.168.2.0

2. 0 0 0 0

192.168.2.0

3. 0 0 0 0

192.168.2.0

4. 0 0 0 0

192.168.2.0

5. 0 0 0 0

192.168.2.0

6. 0 0 0 0

192.168.2.0

7. 0 0 0 0

192.168.2.0

8. 0 0 0 0

192.168.2.0

HELP

SAVE SETTINGS

CANCEL

SNMP

Use the SNMP configuration screen to display and modify parameters for the Simple Network Management Protocol (SNMP).

Community

A computer attached to the network, called a Network Management Station (NMS), can be used to access this information. Access rights to the agent are controlled by community strings. To communicate with the Barricade, the NMS must first submit a valid community string for authentication.

SNMP Community

In the context of SNMP, a relationship between an agent and a set of SNMP managers defines security characteristics. The community concept is a local one, defined at the agent. The agent establishes one community for each desired combination of authentication, access control, and proxy characteristics. Each community is given a unique (within this agent) community name, and the management stations within that community are provided with and must employ the community name in all get operations. The agent may establish a number of communities, with overlapping management station membership.

No.	Community	Access	Valid
1	public	Read	<input checked="" type="checkbox"/>
2	private	Write	<input checked="" type="checkbox"/>
3		Read	<input type="checkbox"/>
4		Read	<input type="checkbox"/>
5		Read	<input type="checkbox"/>

HELP SAVE SETTINGS CANCEL

Parameter

Description

Community	A community name authorized for management access.
Access	Management access is restricted to Read Only (Read) or Read/Write (Write).
Valid	Enables/disables the entry.

Note: Up to five community names may be entered.

Trap

Specify the IP address of the NMS to notify when a significant event is detected by the agent. When a trap condition occurs, the SNMP agent sends an SNMP trap message to any NMS specified as a trap receiver.

SMC®
NETWORKS

Advanced

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

SNMP

Community

Trap

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

SNMP Trap

In the context of SNMP, an unsolicited message can be sent by an agent to management station. The purpose is to notify the management station of some unusual event.

No.	IP Address	Community	Version
1	0.0.0.0		Disabled
2	0.0.0.0		Disabled
3	0.0.0.0		Disabled
4	0.0.0.0		Disabled
5	0.0.0.0		Disabled

HELP SAVE SETTINGS CANCEL

Parameter	Description
IP Address	Traps are sent to this address when errors or specific events occur on the network.
Community	A community string (password) specified for trap management. Enter a word, something other than public or private, to prevent unauthorized individuals from accessing information on your system.
Version	Sets the trap status to disabled, or enabled with V1 or V2c. The v2c protocol was proposed in late 1995 and includes enhancements to v1 that are universally accepted. These include a get-bulk command to reduce network management traffic when retrieving a sequence of MIB variables, and a more elaborate set of error codes for improved reporting to a Network Management Station.

UPNP

The Universal Plug and Play architecture offers pervasive peer-to-peer network connectivity of PCs of all form factors, intelligent appliances, and wireless devices.

UPnP enables seamless proximity network in addition to control and data transfer among networked devices in the office, home and everywhere within your network.

SMC® Networks Advanced Setup [Home](#) [Logout](#)

SYSTEM
WAN
LAN
WIRELESS
NAT
ROUTE
FIREWALL
SNMP
UPnP
ADSL
DDNS
VoIP
QoS
TOOLS
STATUS

UPnP(Universal Plug and Play) Setting

The Universal Plug and Play architecture offers pervasive peer-to-peer network connectivity of PCs of all form factors, intelligent appliances, and wireless devices. UPnP enables seamless proximity network in addition to control and data transfer among networked devices in the home, office and everywhere in between.


UPnP ☒ Enable ☐ Disable

[HELP](#) [SAVE SETTINGS](#) [CANCEL](#)

ADSL

ADSL (Asymmetric Digital Subscriber Line) is designed to deliver more bandwidth downstream (from the central office to the customer site) than upstream. This section is used to configure the ADSL operation type and shows the ADSL status.

ADSL Parameters

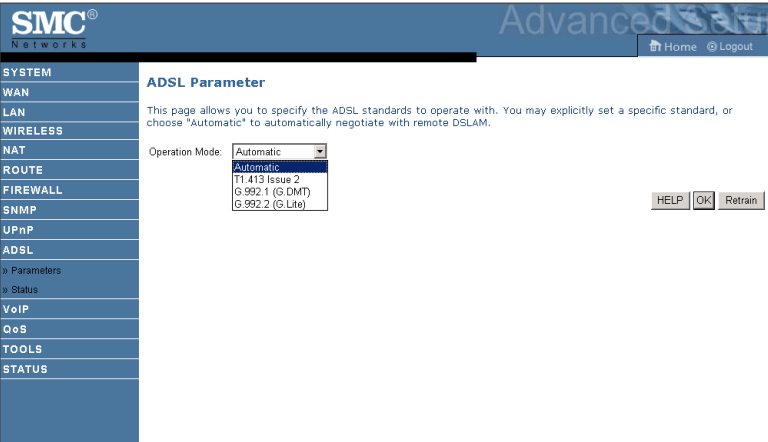

Parameter	Description
Operation Mode	<ul style="list-style-type: none">AutomaticT1.413 Issue 2G.992.1 (G.DMT)G.992.2 (G.Lite)

This page is designed for the engineer to test the ADSL loop condition. Therefore, it is advised that users should not change the settings here at all.

ADSL Status

The Status screen displays information on connection line status, data rate, operation data and defect indication, and statistics.

Monitoring Index:

- ADSL Status Information:
 - [Status](#)
 - [Data Rate Information](#)
 - [Defect/Failure Indication](#)
 - [Statistics](#)
- Status:

	Configured	Current
Line Status	---	QUIET1
Link Type	---	Interleaved Path

 - [\[Go Top\]](#)
- Data Rate:

Stream Type	Actual Data Rate
Up Stream	0 (Kbps.)
Down Stream	0 (Kbps.)

 - [\[Go Top\]](#)
- Operation Data / Defect Indication:

Operation Data	Upstream	Downstream
Noise Margin	0 dB	0 dB
Attenuation	0 dB	0 dB

Scroll down to view more information.

Line Status

Line Status	---	QUIET1
Link Type	---	Interleaved Path

- [\[Go Top\]](#)

Data Rate:

Stream Type	Actual Data Rate
Up Stream	0 (Kbps.)
Down Stream	0 (Kbps.)

- [\[Go Top\]](#)

Operation Data / Defect Indication:

Operation Data	Upstream	Downstream
Noise Margin	0 dB	0 dB
Attenuation	0 dB	0 dB

Indicator Name

Indicator Name	Near End Indicator	Far End Indicator
Fast Path FEC Correction	0	0
Interleaved Path FEC Correction	0	0
Fast Path CRC Error	0	0
Interleaved Path CRC Error	0	0
Loss of Signal Defect	0	---
Fast Path HEC Error	0	0
Interleaved Path HEC Error	0	0

- [\[Go Top\]](#)

Statistics:

Received Cells	0
Transmitted Cells	0

- [\[Go Top\]](#)

The following items are included on this information page:

Parameter	Description
Status	
Line Status	Shows the current status of the ADSL line connection.
Data Rate	
Upstream	Maximum upstream data rate.
Downstream	Maximum downstream data rate.
Operation Data/Defect Indication	
Noise Margin	Maximum upstream and downstream noise margin.
Output Power	Maximum fluctuation in the output power.
Attenuation	Maximum reduction in the strength of the upstream and downstream signal.
Fast Path FEC Correction	There are two latency paths that may be used: fast and interleaved. For either path, a forward error correction (FEC) scheme is employed to ensure higher data integrity. For maximum noise immunity, an interleaver may be used to supplement FEC.
Interleaved Path FEC Correction	An interleaver is basically a buffer used to introduce a delay, allowing for additional error correction techniques to handle noise. Interleaving slows the data flow and may not be optimal for real-time signals such as video transmission.
Fast Path CRC Error	The number of Fast Path Cyclic Redundancy Check errors.
Interleaved Path CRC Error	The number of Interleaved Path Cyclic Redundancy Check errors.
Loss of Signal Defect	Momentary signal discontinuities.
Loss of Frame Defect	Failures due to loss of frames.
Loss of Power Defect	Failures due to loss of power.
Fast Path HEC Error	Fast Path Header Error Concealment errors.
Interleaved Path HEC Error	Interleaved Path Header Error Concealment errors.

Parameter	Description
Statistics	(Superframes represent the highest level of data presentation. Each superframe contains regular ADSL frames, one of which is used to provide superframe synchronization, identifying the start of a superframe. Some of the remaining frames are also used for special functions.)
Received Superframes Interleaved	Number of interleaved superframes received.
Transmitted Superframes Interleaved	Number of interleaved superframes transmitted.
Received Superframes Fast	Number of fast superframes received.
Transmitted Superframes Fast	Number of fast superframes transmitted.

DDNS

Dynamic Domain Name Service (DDNS) provides users on the Internet with a method to tie their domain name to a computer or server. DDNS allows your domain name to follow your IP address automatically by having your DNS records changed when your IP address changes.

This DNS feature is powered by DynDNS.org or TZO.com. With a DDNS connection you can host your own web site, email server, FTP site, and more at your own location even if you have a dynamic IP address.

The screenshot shows the SMC Networks Advanced Setup web interface. On the left is a vertical navigation menu with the following items: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The 'DDNS' item is highlighted. The main content area is titled 'DDNS (Dynamic DNS) Settings'. Below the title is a paragraph of instructions: 'Set a password to restrict management access to the Barricade. If you want to manage the Barricade from a remote location (outside of the local network), you must also specify the IP address of the remote PC. You can do this in the Firewall - Access Control menu.' Below this text is a form with the following fields: 'Dynamic DNS' with radio buttons for 'Enable' and 'Disable' (the 'Disable' button is selected); 'Provider' with a dropdown menu showing 'DynDNS.org'; 'Domain Name' with a text input field; 'Account / E-mail' with a text input field; and 'Password / Key' with a text input field. At the bottom right of the form are three buttons: 'HELP', 'SAVE SETTINGS', and 'CANCEL'.

SMC® Networks		Advanced Setup
SYSTEM		Home Logout
WAN		
LAN		
WIRELESS		
NAT		
ROUTE		
FIREWALL		
SNMP		
UPnP		
ADSL		
DDNS		
VoIP		
QoS		
TOOLS		
STATUS		

DDNS (Dynamic DNS) Settings

Set a password to restrict management access to the Barricade. If you want to manage the Barricade from a remote location (outside of the local network), you must also specify the IP address of the remote PC. You can do this in the Firewall - Access Control menu.

Dynamic DNS	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Provider	DynDNS.org
Domain Name	
Account / E-mail	
Password / Key	

HELP SAVE SETTINGS CANCEL

VOIP

Dial Setting

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with categories: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, and VoIP. The VoIP category is expanded, showing sub-items: Dial Setting, Port Setting, Outgoing Mode, H323 Setting, Numbering Plan, PBX ID/Prefix, Peer Gateway, User Management, and VoIP Status. The 'Dial Setting' sub-item is selected. The main content area is titled 'Dial Setting' and includes a note: 'Use the following field to set your dialing parameters according to your location. Press OK button to proceed.' Below this are three sections: 'Prefix Setting' with fields for 'International:' (value 002) and 'Long Distance:' (value 0); 'Local Information:' with fields for 'Country Code:' (value 986) and 'Area Code:' (value 2); and 'Group ID:' with fields for 'Use Group ID:' (checkbox), 'Use Group ID for PSTN Number:' (checkbox), and 'Group ID:' (text field). At the bottom is the 'Tone Style:' section with a field 'As Tones in Area:' set to 'Netherlands'.

Parameter	Description
Prefix setting	
International	Enter the prefix for dialing international calls.
Long Distance	Enter the prefix for dialing long distance calls.
Local Information	
Country Code	Enter your country code here.
Area Code	Enter your area code here.
Group ID	
Use Group ID	Check this box to use the group ID mechanism.
Use Group ID for PSTN Number	Check this box to use the group ID for your PSTN phone number.
Group ID	Enter your Group ID here.
Tone Style	
As Tone in Area	Select the tone style that you desire.

Port Setting_for Phone

You can configure the port settings for your phone in this page.

SMC®
Networks

Advanced Settings

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

Dial Setting

Port Setting

Outgoing Mode

H323 Setting

Numbering Plan

PBX ID/Prefix

Peer Gateway

User Management

Port Setting

Select a port to configure. The current port's setting will be saved after you select another port, or press OK button.

Port Selected: Phone 1

Port General SetLine 1

Port Status:☒ Enable

Port Type:Phone Set

Extension Number:3011

FAX Support:☒ Auto FAX Detection
☐ Don't Use FAX Protocol
☐ Always Use FAX Protocol

Security Setting:

Allows to Make:☒ VoIP Call ☒ PSTN Call

VoIP Authentication:☐ on Making a Call

Advanced Setting: Adv. Setting

Parameter	Description
Port General Setting	
Port Status	Check this box to enable the function.
Port Type	Select phone set or PBX CO line.
Extension Number	If you have an extension number, enter it here.
FAX Support	Select the FAX function that you desire.
Security Setting	
Allows to Make	Check the type of calls that's allowed using this phone set.
VOIP Authentication	Check this box to perform authentication when making voice calls.
Advanced Setting	Click this button to set detailed parameters, see page 4-71 for more information.

Port Setting for Line

You can configure the port settings for your phone line in this page.

The screenshot shows the SMC Networks Advanced Setup web interface. On the left is a navigation menu with categories: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, and STATUS. The VoIP category is expanded, showing sub-items: Dial Setting, Port Setting (selected), Outgoing Mode, H323 Setting, Numbering Plan, PBX ID/Prefix, Peer Gateway, User Management, and VoIP Status. The main content area is titled 'Port Setting' and includes instructions: 'Select a port to configure. The current port's setting will be saved after you select another port, or press OK button.' Below this, 'Port Selected:' is set to 'Line 1'. Under 'Port General Setting:', 'Port Status:' is 'Enable' (checked) and 'Port Type:' is 'Relay Mode'. Under 'Security Setting:', 'Allows to Make:' includes 'VoIP Call' (checked) and 'PSTN Call' (checked), and 'VoIP Authentication:' is 'on Making a Call'. An 'Advanced Setting:' button labeled 'Adv. Setting' is at the bottom. 'OK' and 'CANCEL' buttons are in the bottom right corner.

Parameter	Description
Port General Setting	
Port Status	Check this box to enable the function.
Port Type	Select Relay mode or Dedicated line.
Security Setting	
Allows to Make	Check the type of calls that's allowed using this line.
VOIP Authentication	Check this box to perform authentication when making voice calls.

Advanced setting

Click the “Adv Setting” button to set detailed parameters.

SMC®
NETWORKS

Advanced

Home Logout

SYSTEM

LAN

LAN

WIRELESS

WAT

ROUTE

FWALL

NMP

PnP

DSL

DNS

oIP

Dial Setting

Port Setting

Outgoing Mode

H323 Setting

Numbering Plan

FXID/Prefix

Peer Gateway

User Management

VoIP Status

oS

TOOLS

STATUS

Port Advanced Setting

Phone/FAX Advanced Function

Input Volume Gain:	-10
Output Volume Gain:	0

FAX Sending Advanced Function

FAX Sending Protocol Priority:	<input checked="" type="checkbox"/> 1.T.38 FAX (UDP) <input checked="" type="checkbox"/> 2.FAX <input checked="" type="checkbox"/> 3.G.726 <input checked="" type="checkbox"/> 4.G.711
Input Calibration Gain:	12
Output Calibration Gain:	0
FAX Using Volume Gain Function ?	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
FAX Sending Speed Limit ?	9600 bps
ZEROed Packet Compensate ?	Yes
Packet Redundancy ?	1
G.726/G.711 Packet Compensate ?	Yes
FAX ECM Function ?	No
FAX Variant	3 Delay 2400 ms

Gain Status Detection

Input Gain: 0.0

Output Gain: 0.0

DETECT

OK Reload

Outgoing Mode

Select the outgoing mode to find the peer gateway, two modes are supported: enterprise mode and ITSP mode. Click “Next” to proceed with the detailed configurations.

The screenshot shows the 'Outgoing Mode Selection' screen in the SMC Networks Advanced Setup. On the left is a navigation menu with options: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, and QoS. The 'ROUTE' option is selected. The main content area is titled 'Outgoing Mode Selection' and contains the instruction: 'Please choose the desired Outgoing Mode for this device. Click NEXT button to proceed.' There are two radio button options: 'Operating without GateKeeper (Enterprise Mode)' and 'Operating with GateKeeper (ITSP Mode)'. The 'Operating with GateKeeper (ITSP Mode)' option is selected. A 'NEXT' button is located at the bottom right of the main content area.

Enterprise Mode

The screenshot shows the 'Outgoing Peer Gateway Database' configuration screen in the SMC Networks Advanced Setup. The left navigation menu is the same as in the previous screen, with 'ROUTE' selected. The main content area is titled 'Outgoing Peer Gateway Database' and contains two tables. The first table is 'Extension Peer Gateway Table' with columns: Index, Extension, IP Add./DNS Name, and Connect to PBX. The table is empty, with the text 'Database is Empty' in red. Below the table are 'Add', 'Delete', and 'Modify' buttons. The second table is 'Outgoing Peer Gateway Table' with columns: Index, CC, AC, SN, and IP Add./DNS Name. This table is also empty, with the text 'Database is Empty' in red. Below this table are also 'Add', 'Delete', and 'Modify' buttons. Below the tables is the 'Unlisted Numbers' section, which includes the text 'for unlisted numbers, connect to a proxy.' and a checkbox labeled 'Use Proxy'. The 'Proxy IP' field is empty. An 'Apply' button is located below the 'Use Proxy' checkbox. A 'NEXT' button is located at the bottom right of the main content area.

ITSP mode

SMC[®]
Networks

Advanced

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

» Dial Setting

» Port Setting

» Outgoing Mode

» H323 Setting

ITSP Mode (with GateKeeper)

Please enter the correct parameters for this device. Click OK button to proceed

GateKeeper Mode: Assigned IP

GateKeeper Setting:

IP Address: 211.21.80.6

2IP Address:

Gatekeeper ID:

Security: None Used

Password:

OK CANCEL

H.323 Setting

SMC®
Networks

Advanced Setup

[Home](#)
[Logout](#)

SYSTEM
WAN
LAN
WIRELESS
NAT
ROUTE
FIREWALL
SNMP
UPnP
ADSL
DDNS
VoIP
 » Dial Setting
 » Port Setting
 » Outgoing Mode
 » H.323 Setting
 » Numbering Plan
 » PBX ID/Prefix
 » Peer Gateway
 » User Management
 » VoIP Status
QoS
TOOLS
STATUS

H.323 Setting

Please config the H323 related options, and click **OK** button to proceed

H.323:

H.323 Version:	2
H.245 Mode	Tunneling
Time To Live:	100 sec
Endpoint Type:	<input type="radio"/> Terminal <input checked="" type="radio"/> Gateway
Q.931 Port:	1720
Other Options	<input checked="" type="checkbox"/> Fast Connect <input checked="" type="checkbox"/> Allow Outband DTMF <input type="checkbox"/> Allow Inband Ringback <input type="checkbox"/> Passing through NAT

Alias:

H.323 ID	<input checked="" type="checkbox"/> Use MAC address <input type="checkbox"/> Use Serial Number <input type="checkbox"/> Use Vendor ID <div>User Input</div>
URL ID	
Email ID	

Parameter	Description
H.323	
H.323 Version	This is the version of the H.323 protocol.
H.245Mode	Select the mode for H.245.
Time to Live	Set the TTL time in seconds.
Endpoint Type	Choose the endpoint type: terminal or gateway.
Q.931 Port	Set the port to use for Q.931.
Other Options	Enable the functions that you want to use with this device.
Alias	
H.323 ID	Select the item that you want to use.
URL ID	Enter your URL ID here.
Email ID	Enter your email ID here.

The device supports the following codecs, use the left and right arrows to select the Codes to use, and use the up and down buttons to arrange the priority.

H323 Setting

Numbering Plan

PEXID/Prefix

Peer Gateway

User Management

VoIP Status

oS

TOOLS

STATUS

Codec Priority:

click [>>] or [<<] button to add a new codec or remove it from list, and click [Up] or [Down] button to adjust the priorities of the selected codecs.

Available Codecs

G.723a
G.711 A Law

>>
<<

Selected Codecs

G.723 1
G.723
G.711 MuLaw
G.726

Up
Down

OK CANCEL

Numbering Plan

An alias address in RAS or Q.931 may represent an endpoint or it may represent conferences that an endpoint is hosting. An alias address can be used when the actual address of an endpoint (or the conference ID) is not known. The caller may call a gatekeeper and give the gatekeeper the alias of the endpoint that the caller wishes to reach. The gatekeeper resolves the alias and connects to the appropriate endpoint. Version 2 of H.323 adds support for four additional alias types: Email, URL, Transport ID and Party Number.

SMC®

Advanced

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

Dial Setting

Numbering Plan

Please choose the desired category which be configured. The current category's configuration will be saved after you select another category, or click **OK** button.

Category

Outgoing

AliasAddress Choice

☒ DialDigits ☐ H323_ID ☐ URL_ID
☐ TransportID ☐ Email_ID ☐ PartyNumber

Number Policy

☐ Use E.164 ☐ Add Area Code

Additional Numbering

OK CANCEL

Parameter	Description
Category	Select the category that you want to configure.
Alias Address Choice	Select the name that you want to use as the Alias.
Number Policy	Check the option that you want to use.

Click the “additional numbering” button to add an additional number.

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: ROUTE, FIREWALL, NMP, PnP, DSL, DNS, and VoIP. The main content area is titled "Additional Numbering". Below the title, it says: "The additional numbering plan setting is listed below. After you modified any field in table, please click OK button to proceed." There are two sections: "Additional Numbering Plan" with radio buttons for "Enable" and "Disable" (where "Disable" is selected), and "Manipulating Rules". The "Manipulating Rules" section contains a table with columns: No, Trig. Len, Operations, Original Number, Number after Apply, Skip Other Rules, Skip G.K., and Configure. Below the table is a link "Add New Rule". At the bottom right are "OK" and "CANCEL" buttons.

Parameter	Description
Additional Numbering Plan	Check to enable or disable this function.
Manipulating Rules	This table shows the rule information of your numbering plans.
Add New Rule	Click to add new rules.

PBX ID/Prefix

The current Prefix (PBX ID or E.164 Number Prefix) is listed in this table. Click the “Add” button to add a new entry, or click “Delete” or “Modify” to change the selected entry.

SMC®
Networks

Advanced

Home Logout

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

Dial Setting

Port Setting

Outgoing Mode

PBX ID/Prefix Setting for Incoming

The current Prefix (PBX ID or E.164 Number Prefix) is listed in table below. Click **Add** button to add new entry, or click **Delete** or **Modify** button to change the selected entry.

Index	Prefix	Connect to PBX
Database is Empty		

AddModifyDelete

OK

Peer Gateway

The current incoming peer gateway entries information is listed in this table. Click “Add” to add a new entry, or click the “Delete” or “Modify” button to change the selected entry.

SMC®
Networks

Advanced

Home Logout

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

Dial Setting

Port Setting

Outgoing Mode

H323 Setting

Numbering Plan

Peer Gateway Database

The current incoming peer gateway entries is listed in table below. Click **Add** button to add new entry, or click **Delete** or **Modify** button to change the selected entry.

Index	IP Address	Netmask	Enable		
			Local	Long Distance	International
Database is Empty					

AddModifyDelete

OK

User Management

The current Phone User Information is listed in this table. Click the “Add” button to add a new entry, or click “Delete” or “Modify” to change the selected entry.

The screenshot shows the SMC Networks Advanced Setup interface. On the left is a navigation menu with options: ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, and VoIP. The VoIP section is expanded, showing sub-options: Dial Setting, Port Setting, Outgoing Mode, and H323 Setting. The main content area is titled "Phone User Management" and includes a description: "The current Phone User Information Database is listed in table below. Click **Add** button to add new entry, or click **Delete** or **Modify** button to change the selected entry." Below this is a table with columns: Index, User ID, Password, and Description. The table contains a single row with the text "Database is Empty". At the bottom of the table are three buttons: Add, Modify, and Delete. An "OK" button is located at the bottom right of the interface.


VOIP Status

This page displays the phone port status and the Gatekeeper status.

The screenshot shows the SMC Networks Advanced Setup interface for VoIP Status Monitoring. The left navigation menu is the same as in the previous screenshot, but the "NAT" option is now selected. The main content area is titled "VoIP Status Monitoring" and includes two sections. The first section, "Phone Port Status :", contains a table with columns: No., Port Type, Status, Start, Elapsed, Remote Host, and Destination. The table has two rows: "Phone 1" with "Phone Set" and "Idle" status, and "Line 1" with "Relay Mode" and "Idle" status. The second section, "Gatekeeper Status :", displays the text "No GateKeeper". At the bottom of the interface are two buttons: Refresh and Help.

QOS

The QoS (Quality of Service) function allows you to differentiate VoIP traffic and provide it with high-priority forwarding service. In addition, you can specify the outgoing VC of VoIP packets to further guarantee the voice quality.

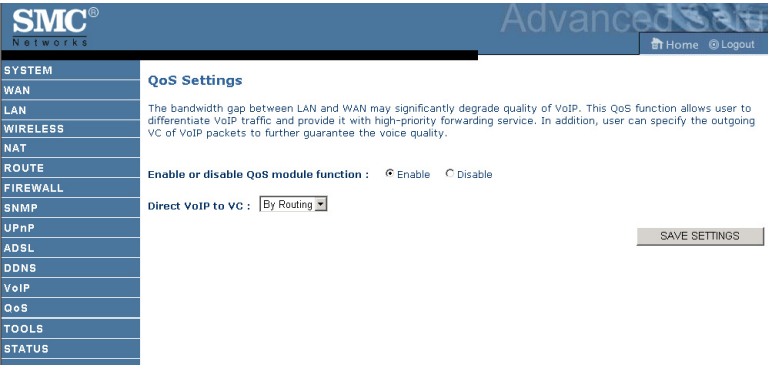

Parameter	Description
Enable or disable QoS module function	Check to enable or disable this function.
Direct VoIP to VC	Select the Virtual Connection.

TOOLS

Use the Tools menu to backup the current configuration, restore a previously saved configuration, restore factory settings, update firmware, and reset the Barricade.

Configuration Tools

Choose a function and click Next.



Backup allows you to save the Barricade's configuration to a file. Restore can be used to restore the saved backup configuration file. Restore to Factory Defaults resets the Barricade back to the original settings.

You will be asked to confirm your decision.

Firmware Upgrade

Use this screen to update the firmware or user interface to the latest versions. Download the upgrade file from the SMC web site first, and save it to your hard drive. In the Upgrade Target field, choose Firmware. Then click “Browse...” to look for the downloaded file. Click “BEGIN UPGRADE”. Check the Status page Information section to confirm that the upgrade process was successful.

The screenshot shows the SMC Networks Advanced Web Management Interface (AWM) for a Voice ADSL Router. The interface has a blue header with the SMC logo and 'Advanced Web Management Interface' text. A navigation menu on the left lists various system settings: SYSTEM, WAN, LAN, WIRELESS, NAT, ROUTE, FIREWALL, SNMP, UPnP, ADSL, DDNS, VoIP, QoS, TOOLS, Configuration Tools, Firmware Upgrade (selected), Reset, and STATUS. The main content area is titled 'Firmware Upgrade' and contains the following text: 'This tool allows you to upgrade the router firmware using a file provided by us. You can download the latest firmware from <http://www.smc.com>'. Below this, it says: 'Enter the path and name, or browse to the location, of the upgrade file then click the APPLY button. You will be prompted to confirm the upgrade to complete the process.' There is a text input field labeled 'Firmware File' with a 'Browse...' button next to it. At the bottom right, there are three buttons: 'HELP', 'BEGIN UPGRADE', and 'CANCEL'.

SMC®
Networks

Advanced Web Management Interface

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

» Configuration Tools

» Firmware Upgrade

» Reset

STATUS

Firmware Upgrade

This tool allows you to upgrade the router firmware using a file provided by us. You can download the latest firmware from <http://www.smc.com>


Enter the path and name, or browse to the location, of the upgrade file then click the APPLY button. You will be prompted to confirm the upgrade to complete the process.

Firmware File Browse...

HELP BEGIN UPGRADE CANCEL

Reset

Click “REBOOT ROUTER” to reset the Barricade. The reset will be complete when the power LED stops blinking.

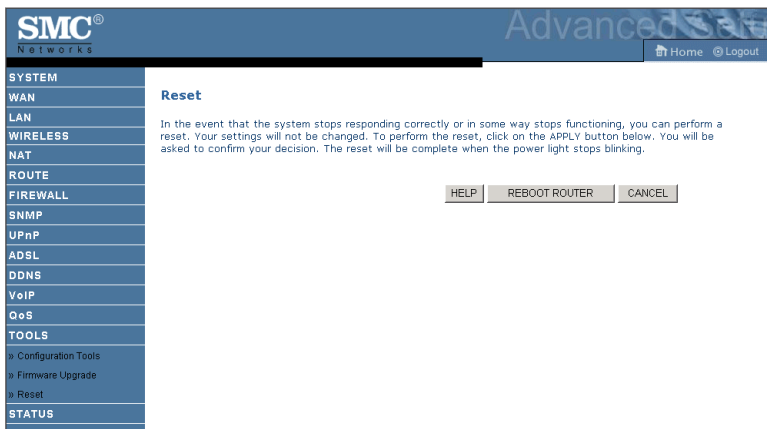


If you perform a reset from this page, the configurations will not be changed back to the factory default settings.

Note: If you use the Reset button on the back panel, the Barricade performs a power reset. If the button is pressed for over five seconds, all the LEDs will illuminate and the factory default settings will be restored.

STATUS

The Status page displays WAN/LAN connection status, firmware, and hardware version numbers, illegal attempts to access your network, as well as information on DHCP clients connected to your network. The security log may be saved to a file by clicking “Save” and choosing a location.

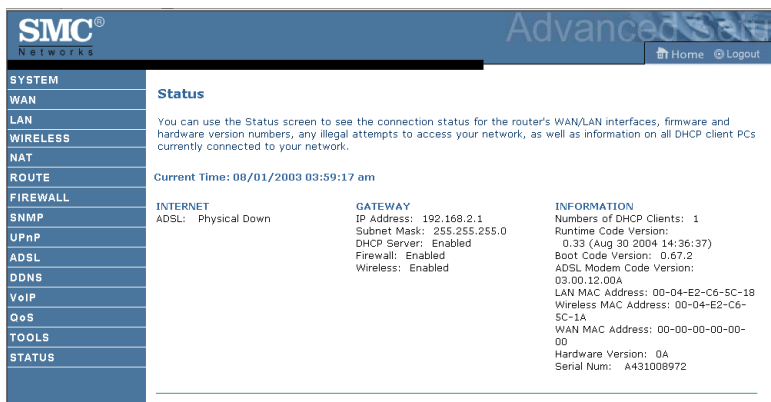

SMC® Networks Advanced Router

[Home](#) [Logout](#)

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

Status

You can use the Status screen to see the connection status for the router's WAN/LAN interfaces, firmware and hardware version numbers, any illegal attempts to access your network, as well as information on all DHCP client PCs currently connected to your network.

Current Time: 08/01/2003 03:59:17 am

INTERNET	GATEWAY	INFORMATION
ADSL: Physical Down	IP Address: 192.168.2.1 Subnet Mask: 255.255.255.0 DHCP Server: Enabled Firewall: Enabled Wireless: Enabled	Numbers of DHCP Clients: 1 Runtime Code Version: 0.33 (Aug 30 2004 14:36:37) Boot Code Version: 0.67.2 ADSL Modem Code Version: 03.00.12.00A LAN MAC Address: 00-04-E2-C6-5C-18 Wireless MAC Address: 00-04-E2-C6-5C-1A WAN MAC Address: 00-00-00-00-00-00 Hardware Version: 0A Serial Num: A431008972

Scroll down to view more information on the Status page.

Advanced Setup

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

ATM PVC

<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">VC1</div> <div style="border: 1px solid black; height: 100px; background-color: #f0f0f0; display: flex; align-items: center; justify-content: center;">Disabled</div>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">VC2</div> <div style="border: 1px solid black; height: 100px; background-color: #f0f0f0; display: flex; align-items: center; justify-content: center;">Disabled</div>
<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">VC3</div> <div style="border: 1px solid black; height: 100px; background-color: #f0f0f0; display: flex; align-items: center; justify-content: center;">Disabled</div>	<div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;">VC4</div> <div style="border: 1px solid black; height: 100px; background-color: #f0f0f0; display: flex; align-items: center; justify-content: center;">Disabled</div>

Advanced Setup

Home Logout

SYSTEM

WAN

LAN

WIRELESS

NAT

ROUTE

FIREWALL

SNMP

UPnP

ADSL

DDNS

VoIP

QoS

TOOLS

STATUS

Security Log

View any attempts that have been made to gain access to your network.

08/01/2003	03:08:50	sending ACK to
08/01/2003	03:08:50	sending OFFER
08/01/2003	00:02:09	192.168.2.101

DHCP Client Log

View information on LAN DHCP clients currently linked to the router.

ip=192.168.2.2	mac=00-50-F2-72-82
----------------	--------------------

Save

Clear

Refresh

HELP

The following items are included on the Status page:

Parameter	Description
INTERNET	Displays WAN connection type and status.
Release	Click on this button to disconnect from the WAN.
Renew	Click on this button to establish a connection to the WAN.
GATEWAY	Displays system IP settings, as well as DHCP Server and Firewall status.
INFORMATION	Displays the number of attached clients, the firmware versions, the physical MAC address for each media interface and for the Barricade, as well as the hardware version and serial number.
ATM PVC	Displays ATM connection type and status.
Disabled	The ATM connection is disabled.
Connect	Click on this button to establish a connection to the ATM connection.
Security Log	Displays attempts to access your network.
Save	Click on this button to save the security log file.
Clear	Click on this button to delete the access log.
Refresh	Click on this button to refresh the screen.
DHCP Client Log	Displays information on DHCP clients on your network.

Finding the MAC address of a Network Card

WINDOWS NT4/2000/XP

Click Start/Programs/Command Prompt. Type “ipconfig /all” and press “ENTER”.

The MAC address is listed as the “Physical Address.”

MACINTOSH

Click System Preferences/Network.

The MAC address is listed as the “Ethernet Address” on the TCP/IP tab.

LINUX

Run the command “/sbin/ifconfig.”

The MAC address is the value after the word “HWaddr.”

APPENDIX A

TROUBLESHOOTING

This section describes common problems you may encounter and possible solutions to them. The Barricade can be easily monitored through panel indicators to identify problems.

Troubleshooting Chart	
Symptom	Action
LED Indicators	
Power LED is Off	<ul style="list-style-type: none">• Check connections between the Barricade, the external power supply, and the wall outlet.• If the power indicator does not turn on when the power cord is plugged in, you may have a problem with the power outlet, power cord, or external power supply. However, if the unit powers off after running for a while, check for loose power connections, power losses, or surges at the power outlet. If you still cannot isolate the problem, then the external power supply may be defective. In this case, contact Technical Support for assistance.

Troubleshooting Chart	
Symptom	Action
LED Indicators	
Link LED is Off	<ul style="list-style-type: none"> • Verify that the Barricade and attached device are powered on. • Be sure the cable is plugged into both the Barricade and the corresponding device. • Verify that the proper cable type is used and that its length does not exceed the specified limits. • Be sure that the network interface on the attached device is configured for the proper communication speed and duplex mode. • Check the adapter on the attached device and cable connections for possible defects. Replace any defective adapter or cable if necessary.
Network Connection Problems	
Cannot ping the Barricade from the attached LAN	<ul style="list-style-type: none"> • Verify that the IP addresses are properly configured. For most applications, you should use the Barricade's DHCP function to dynamically assign IP addresses to hosts on the attached LAN. However, if you manually configure IP addresses on the LAN, verify that the same network address (network component of the IP address) and subnet mask are used for both the Barricade and any attached LAN devices. • Be sure the device you want to ping (or from which you are pinging) has been configured for TCP/IP.

Troubleshooting Chart	
Symptom	Action
Management Problems	
Cannot connect using the web browser	<ul style="list-style-type: none"> • Be sure to have configured the Barricade with a valid IP address, subnet mask, and default gateway. • Check that you have a valid network connection to the Barricade and that the port you are using has not been disabled. • Check the network cabling between the management station and the Barricade.
Forgot or lost the password	<ul style="list-style-type: none"> • Press the Reset button on the rear panel (holding it down for at least five seconds) to restore the factory defaults.

Troubleshooting Chart	
Symptom	Action
Wireless Problems	
A wireless PC cannot associate with the Barricade.	<ul style="list-style-type: none"> • Make sure the wireless PC has the same SSID settings as the Barricade. See “Channel and SSID” on page 4-32 • You need to have the same security settings on the clients and the Barricade. See “Access Control” on page 4-33.
The wireless network is often interrupted.	<ul style="list-style-type: none"> • Move your wireless PC closer to the Barricade to find a better signal. If the signal is still weak, change the angle of the antenna. • There may be interference, possibly caused by a microwave ovens or wireless phones. Change the location of the interference sources or of the Barricade. • Change the wireless channel on the Barricade. See “Channel and SSID” on page 4-32. • Check that the antenna, connectors, and cabling are firmly connected.
The Barricade cannot be detected by a wireless client.	<ul style="list-style-type: none"> • The distance between the Barricade and wireless PC is too great. • Make sure the wireless PC has the same SSID and security settings as the Barricade. See “Channel and SSID” on page 4-32 and “Access Control” on page 4-33.

APPENDIX B

CABLES

Ethernet Cable

Caution: DO NOT plug a phone jack connector into any RJ-45 port. Use only twisted-pair cables with RJ-45 connectors that conform with FCC standards.

Specifications

Cable Types and Specifications			
Cable	Type	Max. Length	Connector
10BASE-T	Cat. 3, 4, 5 100-ohm UTP	100 m (328 ft)	RJ-45
100BASE-TX	Cat. 5 100-ohm UTP	100 m (328 ft)	RJ-45

Wiring Conventions

For Ethernet connections, a twisted-pair cable must have two pairs of wires. Each wire pair is identified by two different colors. For example, one wire might be red and the other, red with white stripes. Also, an RJ-45 connector must be attached to both ends of the cable.

Each wire pair must be attached to the RJ-45 connectors in a specific orientation. The following figure illustrates how the pins on an Ethernet RJ-45 connector are numbered. Be sure to hold the connectors in the same orientation when attaching the wires to the pins.

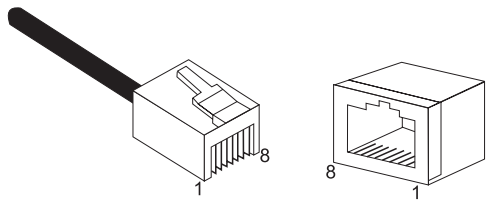


Figure B-1. RJ-45 Ethernet Connector Pin Numbers

RJ-45 Port Connection

Use the straight-through CAT-5 Ethernet cable provided in the package to connect the Barricade to your PC. When connecting to other network devices such as an Ethernet switch, use the cable type shown in the following table.

AttachedDevicePortType	Connecting Cable Type
MDI-X	Straight-through
MDI	Crossover

Pin Assignments

With 100BASE-TX/10BASE-T cable, pins 1 and 2 are used for transmitting data, and pins 3 and 6 for receiving data.

RJ-45 Pin Assignments	
Pin Number	Assignment ¹
1	T _x +
2	T _x -
3	R _x +
6	R _x -

1: The “+” and “-” signs represent the polarity of the wires that make up each wire pair.

Straight-Through Wiring

If the port on the attached device has internal crossover wiring (MDI-X), then use straight-through cable.

Straight-Through Cable Pin Assignments	
End 1	End 2
1 (T _x +)	1 (T _x +)
2 (T _x -)	2 (T _x -)
3 (R _x +)	3 (R _x +)
6 (R _x -)	6 (R _x -)

Crossover Wiring

If the port on the attached device has straight-through wiring (MDI), use crossover cable.

Crossover Cable Pin Assignments	
End 1	End 2
1 (Tx+)	3 (Rx+)
2 (Tx-)	6 (Rx-)
3 (Rx+)	1 (Tx+)
6 (Rx-)	2 (Tx-)

ADSL Cable

Use standard telephone cable to connect the RJ-11 telephone wall outlet to the RJ-45 ADSL port on the ADSL Router.

Caution: Do not plug a phone jack connector into an RJ-45 port.

Specifications

Cable Types and Specifications		
Cable	Type	Connector
ADSL Line	Standard Telephone Cable	RJ-11

Wiring Conventions

For ADSL connections, a cable requires one pair of wires. Each wire is identified by different colors. For example, one wire might be red and the other, red with white stripes. Also, an RJ-11 connector must be attached to both ends of the cable.

Each wire pair must be attached to the RJ-11 connectors in a specific orientation. The following figure illustrates how the pins on the RJ-11 connector are numbered. Be sure to hold the connectors in the same orientation when attaching the wires to the pins.


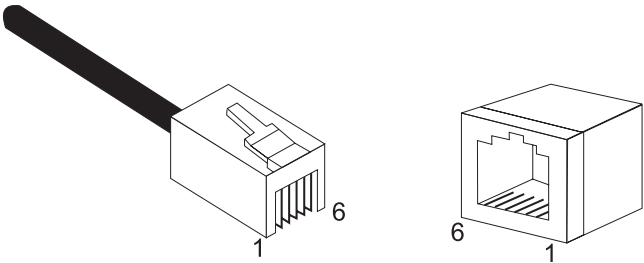


Figure B-2. RJ-11 Connector Pin Numbers

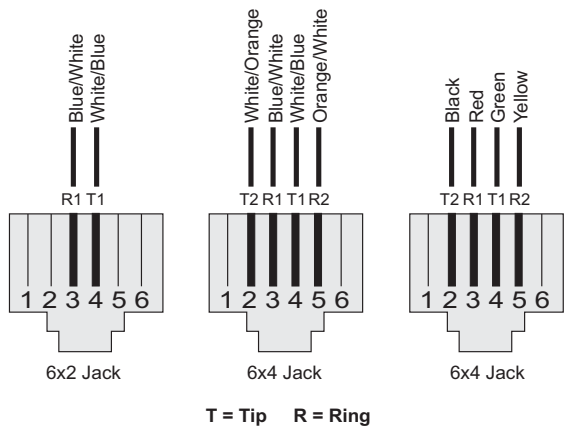

Pin	Signal Name	Wire Color
1	Not used	
2	Line 2 Tip	Black or White/Orange
3	Line 1 Ring	Red or Blue/White
4	Line 1 Tip	Green or White/Blue
5	Line 2 Ring	Yellow or Orange/White
6	Not used	

Figure B-3. RJ-11 Pinouts

APPENDIX C

SPECIFICATIONS

Physical Characteristics

Ports

Four 10/100Mbps RJ-45 ports

One ADSL RJ-11 port

One Phone port

One Line port

ADSL Features

Supports DMT line modulation

Supports Annex A Full-Rate ADSL: up to 8 Mbps downstream, up to 1 Mbps upstream (G.992.1 & T1.413, Issue 2)

Supports G.Lite ADSL: up to 1.5 Mbps downstream, up to 512 Kbps upstream

Dying GASP support

ATM Features

RFC1483 Encapsulation (IP, Bridging and encapsulated routing)

PPP over ATM (LLC & VC multiplexing) (RFC2364)

Classical IP (RFC1577)

Traffic shaping (UBR, CBR)

OAM F4/F5 support

PPP over Ethernet Client

Management Features

Firmware upgrade via web based management

web based management (configuration)

Power Indicators

Event and History logging

Network Ping

Security Features

Password protected configuration access

User authentication (PAP/CHAP) with PPP

Firewall NAT NAPT

VPN pass through (IPSec-ESP Tunnel mode,L2TP, PPTP)

LAN Features

IEEE 802.1D (self-learning transparent Bridging)

DHCP Server

DNS Proxy

Static Routing, RIPv1 and RIP

VoIP Features

H.323

Codec - G.711, G.723, G.729a, G.168

Modulation Type

OFDM, CCK

Radio Features

Wireless RF module Frequency Band

802.11g Radio: 2.4GHz

802.11b Radio: 2.4GHz

USA - FCC

2412~2462MHz (Ch1~Ch11)

Canada - IC

2412~2462MHz (Ch1~Ch11)

Europe - ETSI

2412~2472MHz (Ch1~Ch13)

Spain

2457~2462MHz (Ch10~Ch11)

France

2457~2472MHz (Ch10~Ch13)

Japan - STD-T66/STD-33

2412~2484MHz (Ch1~Ch14)

Operating Channels IEEE 802.11b compliant:

11 channels (US, Canada)
13 channels (ETSI)
2 Channels (Spain)
4 Channels (France)
14 channels (Japan)

Operating Channels IEEE 802.11g compliant:

13 channels (US, Canada, Europe, Japan)

RF Output Power Modulation Rate-Output Power (dBm)

802.11b - 1Mbps 16
802.11b - 2Mbps 16
802.11b - 5.5Mbps 16
802.11b - 11Mbps 16

Modulation Rate-Output Power (dBm)

802.11g - 6Mbps 15
802.11g - 9Mbps 15
802.11g - 12Mbps 15
802.11g - 18Mbps 15
802.11g - 24Mbps 15
802.11g - 36Mbps 15
802.11g - 48Mbps 15
802.11g - 54Mbps 15

Sensitivity Modulation Rate-Receiver 2.412 ~ 2.484 GHz

Sensitivity (dBm)

802.11b - 1Mbps -90
802.11b - 2Mbps -88
802.11b - 5.5Mbps -85
802.11b - 11Mbps -84

Modulation Rate-Receiver Sensitivity Typical (dBm)

802.11g - 6Mbps -88

802.11g - 9Mbps -87

802.11g - 12Mbps -84

802.11g - 18Mbps -82

802.11g - 24Mbps -79

802.11g - 36Mbps -75

802.11g - 48Mbps -68

802.11g - 54Mbps -68

Environmental

SMC7908VoWBRA complies with the following standards:

Temperature: IEC 68-2-14

0 to 50 degrees C (Standard Operating)

-40 to 70 degree C (Non-operation)

Humidity

10% to 90% (Non-condensing)

Vibration: IEC 68-2-36, IEC 68-2-6

Shock: IEC 68-2-29

Drop: IEC 68-2-32

Dimensions

220 x 132 x 30 (mm)

Weight

550 g

Input Power

12 V 1 A

IEEE Standards

IEEE 802.3, 802.3u, 802.11g, 802.1D

ITU G.dmt

ITU G.Handshake

ITU T.413 issue 2 - ADSL full rate

Standards Conformance Electromagnetic Compatibility

CE, ETSI, R&TTE, FCC part 15 class B & FCC part 68, ETS 300 328,
ETS 300 826

Safety

CSA/NRTL (UL1950, CSA 22.2.950) GS (EN60950), CB (IEC60950)

FOR TECHNICAL SUPPORT, CALL:

From U.S.A. and Canada (24 hours a day, 7 days a week)

(800) SMC-4-YOU; Phn: (949) 679-8000; Fax: (949) 679-1481

From Europe : Contact details can be found on

www.smc-europe.com or www.smc.com

INTERNET

E-mail addresses:

techsupport@smc.com

european.techsupport@smc-europe.com

Driver updates:

http://www.smc.com/index.cfm?action=tech_support_drivers_downloads

World Wide Web:

<http://www.smc.com/>

<http://www.smc-europe.com/>

For Literature or Advertising Response, Call:

U.S.A. and Canada:	(800) SMC-4-YOU	Fax (949) 679-1481
Spain:	34-91-352-00-40	Fax 34-93-477-3774
UK:	44 (0) 8712 779802	Fax 44 (0) 118 974 8701
France:	33 (0) 41 38 32 32	Fax 33 (0) 41 38 01 58
Italy:	39 (0) 3355708602	Fax 39 02 739 14 17
Benelux:	31 33 455 72 88	Fax 31 33 455 73 30
Central Europe:	49 (0) 89 92861-0	Fax 49 (0) 89 92861-230
Nordic:	46 (0) 868 70700	Fax 46 (0) 887 62 62
Eastern Europe:	34-93-477-4920	Fax 34 93 477 3774
Sub Saharan Africa:	216-712-36616	Fax 216-71751415
North West Africa:	34 93 477 4920	Fax 34 93 477 3774
CIS:	7 (095) 7893573	Fax 7 (095) 789 357
PRC:	86-10-6235-4958	Fax 86-10-6235-4962
Taiwan:	886-2-87978006	Fax 886-2-87976288
Asia Pacific:	(65) 238 6556	Fax (65) 238 6466
Korea:	82-2-553-0860	Fax 82-2-553-7202
Japan:	81-45-224-2332	Fax 81-45-224-2331
Australia:	61-2-8875-7887	Fax 61-2-8875-7777
India:	91-22-8204437	Fax 91-22-8204443

If you are looking for further contact information, please visit www.smc.com or www.smc-europe.com.

Model Number: SMC7908VoWBRA

SMC[®]
Networks

38 Tesla

Irvine, CA 90618

Phone: (943) 679-8000